



How to Change a Uniview Camera's System Time?

Title:	How to Change a Uniview Camera's System Time?	Version:	V1.1
Product:	IPC	Date	9/26/2023

How to Change a Uniview Camera's System Time?

Description

Note: This method is applicable to most scenarios. If the method cannot solve your problem, it is recommended to consult our Tech Support Team.


https://global.uniview.com/Support/Service_Hotline/

Operating Steps

Change from the camera's web interface

Step 1 Log into the camera's web interface.


Step 2 Go to **Setup>System>Time** to change the system time manually in the **Set Time** field.

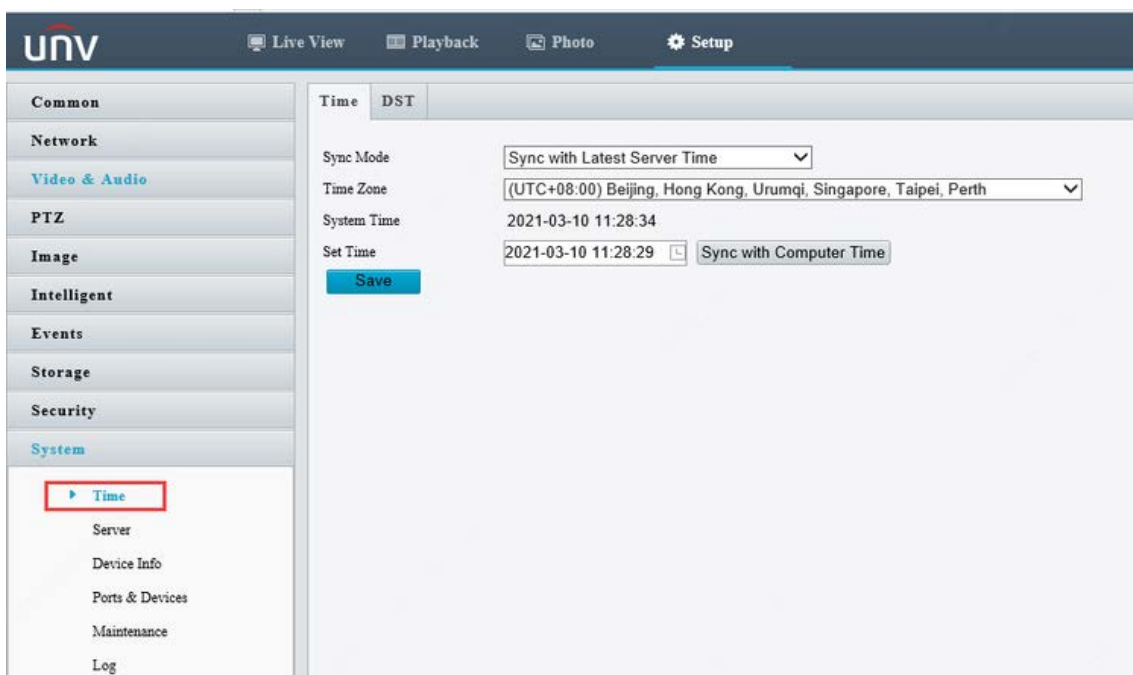

Change from EZTools

Guide for EZTools 3.0.

Step 1 Check the camera and change the time settings under **Device Management>Config>Baisc Config**.

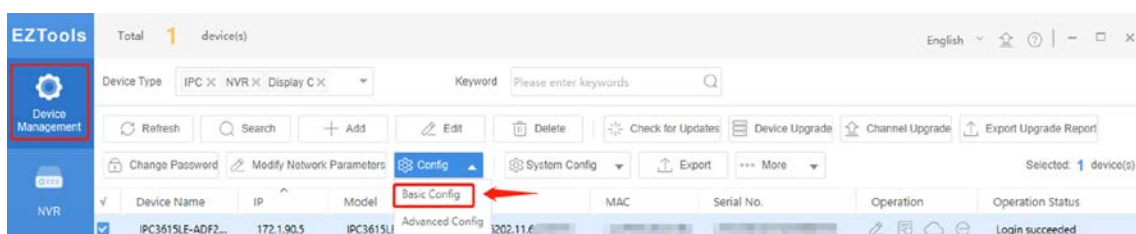


Title:	How to Change a Uniview Camera's System Time?	Version:	V1.1
Product:	IPC	Date	9/26/2023

Step 2 Choose a way to change the device's time zone and system time.

Change manually: Manually change the time zone and system time.

Sync with computer time: Click **Sync with Computer Time** to sync the device's system time with the computer's system time.


Enable Auto Update: Set the NTP server address, port, and update interval, and the device's system time will automatically synchronize with the NTP server time.

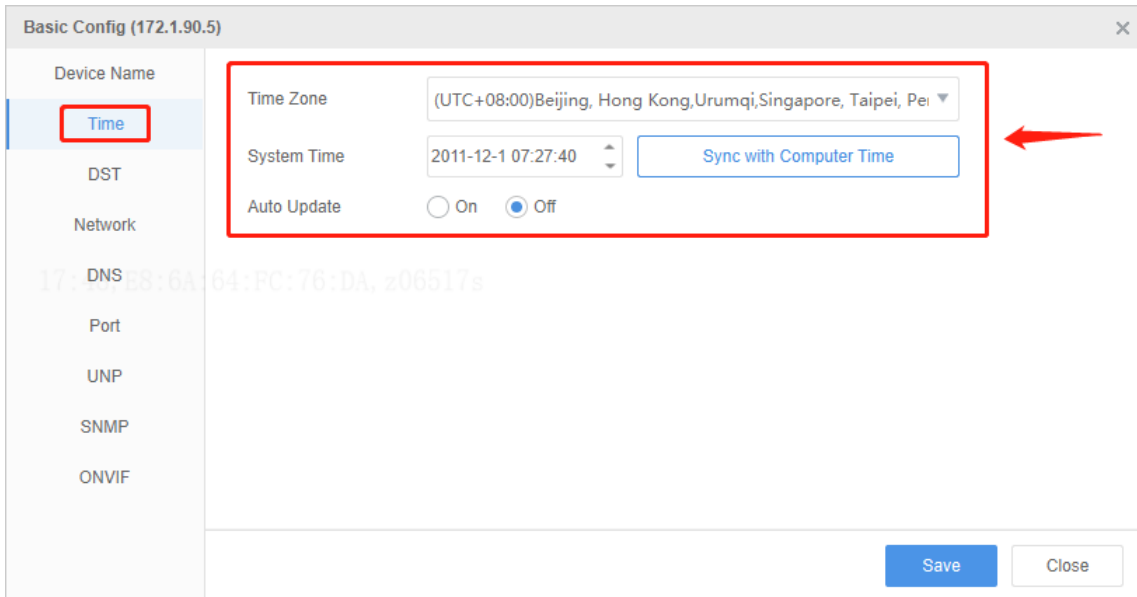

Guide for EZTools 2.0.


Step 1 Install **EZtools** on your computer and open it. Check the camera that you need to change the time settings.

Step 2 Click **Refresh** to search for the camera, **check IPC** from **Device Cfg** to find the cameras in the local network.

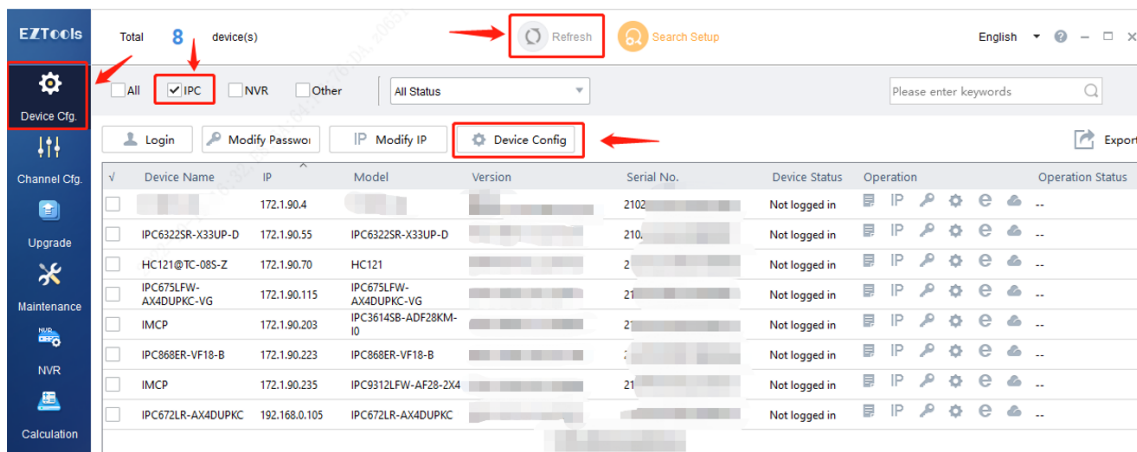


Step 3 Click **Device Config** and then enter the login credentials of your camera. Click **OK**.

Title:	How to Change a Uniview Camera's System Time?	Version:	V1.1
Product:	IPC	Date	9/26/2023

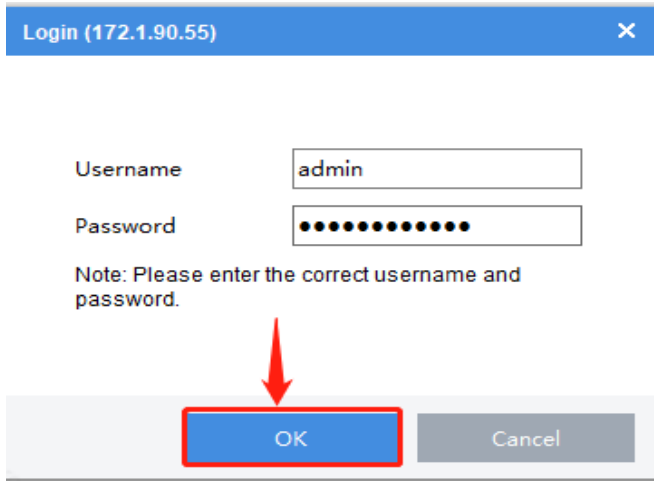


Step 4 Click **Time** and then you can change the camera's time or time zone manually or synchronize the camera's time with the one on your computer. Don't forget to click **Save** after these changes.

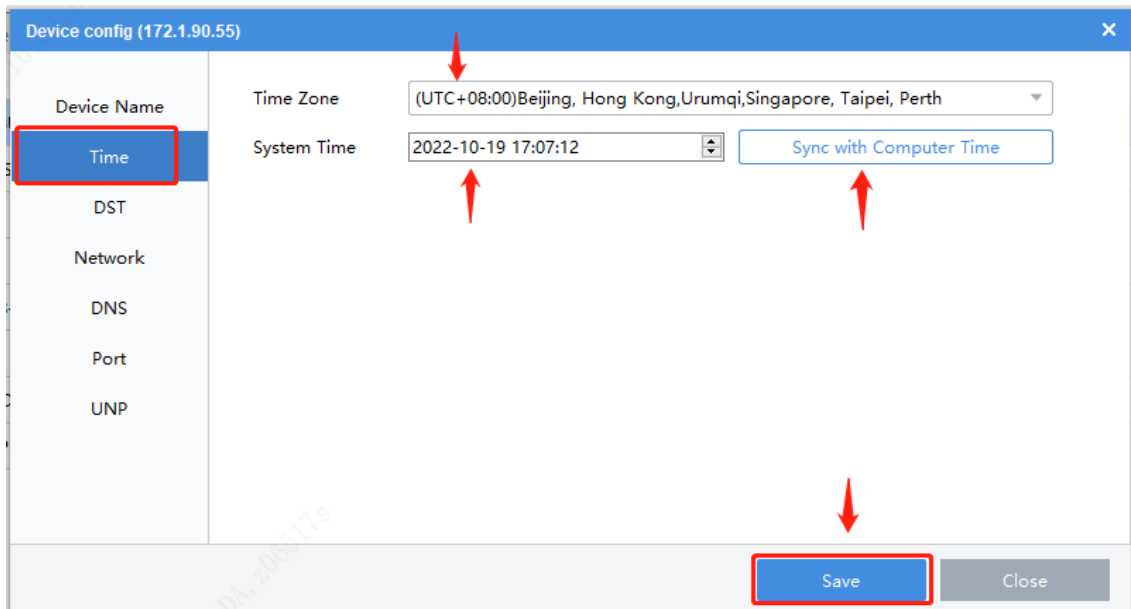


Guide for EZTools 1.0

Step 1 Install **EZTools** on your computer and open it. Check the camera that you want to change the time settings.

Step 2 Click **Time** and enter the camera's login credentials. Click **OK**.

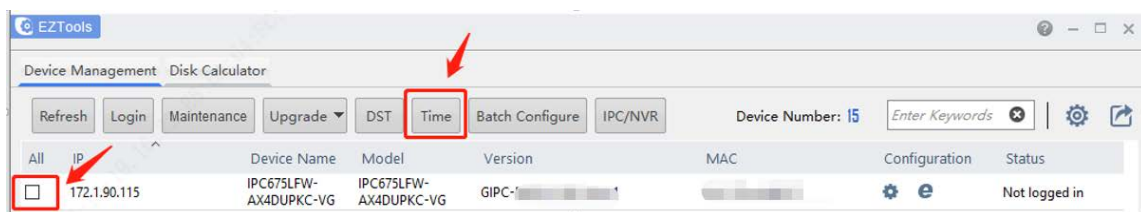

Title:	How to Change a Uniview Camera's System Time?	Version:	V1.1
Product:	IPC	Date	9/26/2023

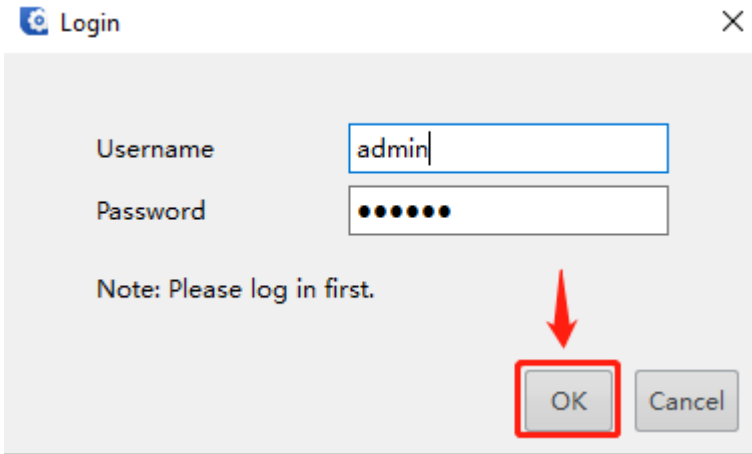

Step 3 Change the camera's time or time zone manually or synchronize the camera's time with your computer's time.

