



How to Set Up Redundant Recording for a Uniview NVR?

Title:	How to Set Up Redundant Recording for a Uniview NVR?	Version:	V1.1
Product:	NVR	Date:	9/26/2023

How to Set Up Redundant Recording for a Uniview NVR?

Description



Customers may wish to set up redundant recording to make sure they have another safe copy of their recordings. Recordings are saved to normal disks and redundant disks simultaneously.

Note: This method is applicable to most of the scenarios encountered problems, if the method still cannot solve your problem, it is recommended to consult our Tech Support Team.


https://global.uniview.com/Support/Service_Hotline/

Operating Steps


Step 1 Click the Configure column of the hard disk you wish to set up under **Menu> Storage> Hard Disk>Hard Disk** on the NVR's GUI/Monitor or under **Setup>Hard Disk> Hard Disk** on the NVR's web interface. Select **Redundant** as the property.

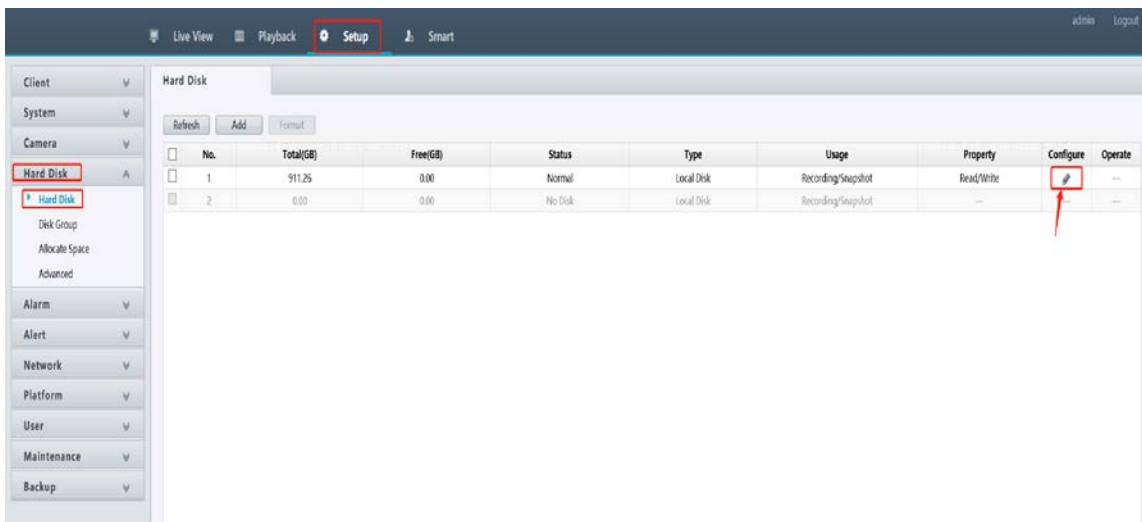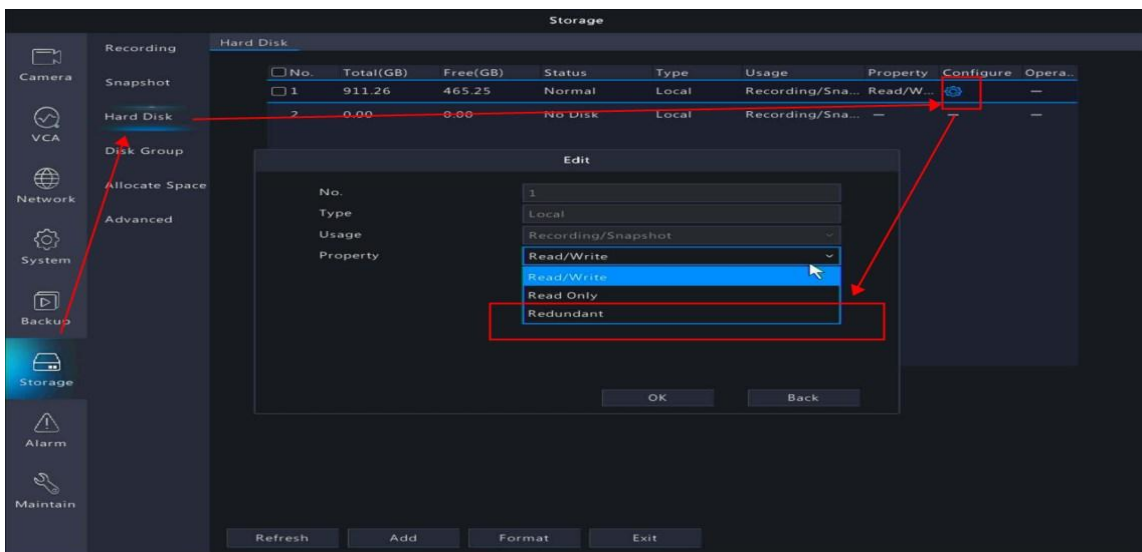

Title:	How to Set Up Redundant Recording for a Uniview NVR?	Version:	V1.1
Product:	NVR	Date:	9/26/2023

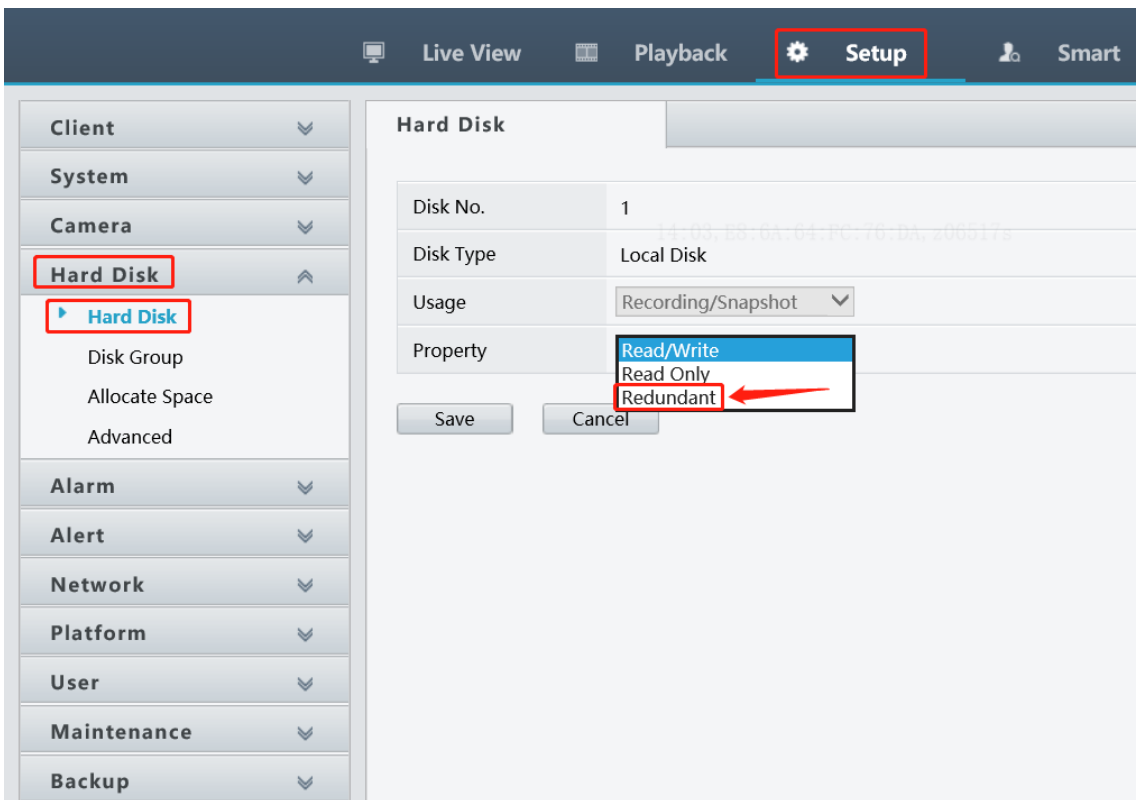

Step 2 Enable Redundant Recording under **Menu>Storage>Recording** on the GUI/Monitor or under **Setup>Camera>Schedule** on the web interface.

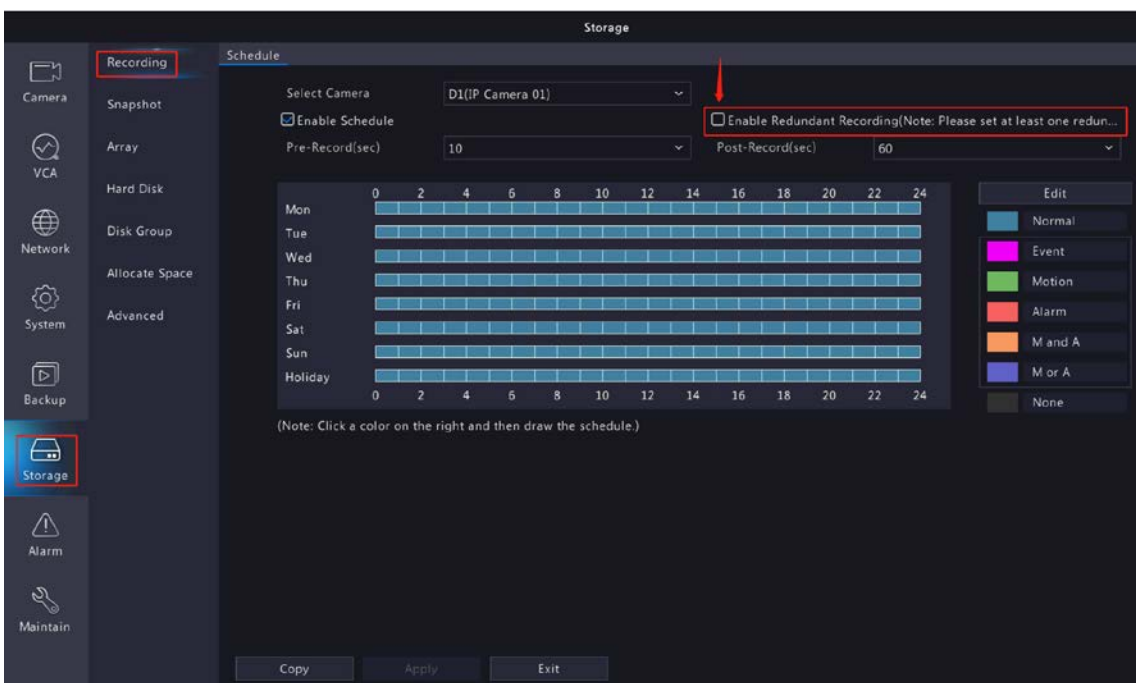

Title:	How to Set Up Redundant Recording for a Uniview NVR?	Version:	V1.1
Product:	NVR	Date:	9/26/2023

The screenshot shows the 'Setup' menu with 'Recording Schedule' selected. The configuration for 'D1 (Camera 01)' includes:

- Select Camera: D1 (Camera 01)
- Pre-Record(sec): 10
- Post-Record(sec): 60
- Redundant Recording: On Off (Note: Please set at least one redundant disk.)
- Recording Schedule: On Off

The recording schedule grid shows 24 hours of recording for all days of the week, categorized as 'Event' (pink). The legend on the right includes: Normal (light blue), Event (pink), Motion (green), Alarm (orange), M and A (yellow), M or A (blue), and None (white).

Note: To view recordings on a redundant disk, you need to change the disk property to **Read Only**.