



Unlimited New View

## **How to Batch Add one Uniview NVR's Channels to Another Uniview NVR via RTSP?**

Title	How to Batch Add one Uniview NVR's Channels to Another Uniview NVR via RTSP?	Version:	V1.0
Product	NVR	Date	11/21/2023

# How to Batch Add one Uniview NVR's Channels to Another Uniview NVR via RTSP?

## Description


**Note:** This method is applicable to most of the scenarios, if the method still cannot solve your problem, it is recommended to consult our Tech Support Team.

[https://global.uniview.com/Support/Service\\_Hotline/](https://global.uniview.com/Support/Service_Hotline/)


## Operating Steps

In order to easily differentiate between the two NVRs, we will refer to the first NVR as NVR A and the second NVR as NVR B. Here takes the NVR's web interface as an example.

**Step 1** Log into NVR B's web interface and click **Add** under **Setup>Camera>Camera**.

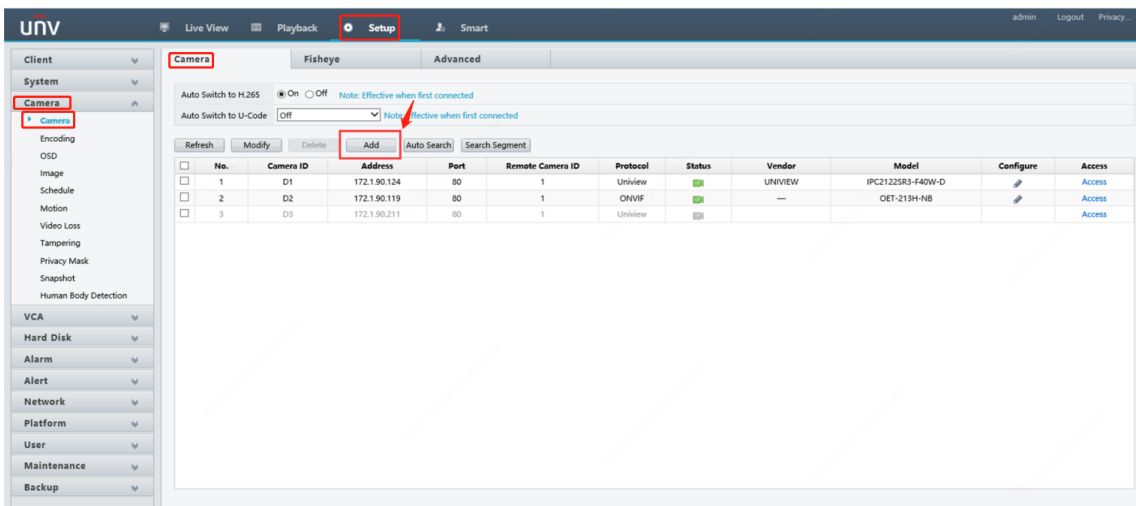

**Step 2** Choose IP Address as the add mode and Custom as the protocol, then input NVR A's username and password.

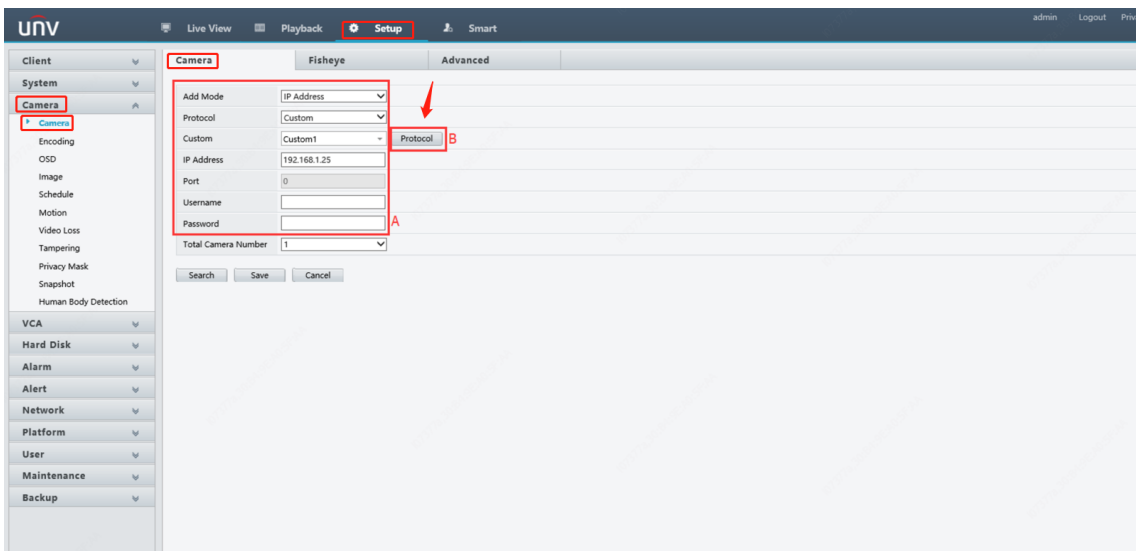


Title	How to Batch Add one Uniview NVR's Channels to Another Uniview NVR via RTSP?	Version:	V1.0
Product	NVR	Date	11/21/2023


**Step 3** Click **Protocol** and then enable Main Stream and Sub Stream and input the corresponding RTSP urls. Keep the other parameters the default one if you haven't changed them. Click **Save**.

Main stream: unicast/c[%C]/s0/live

Sub stream: unicast/c[%C]/s1/live

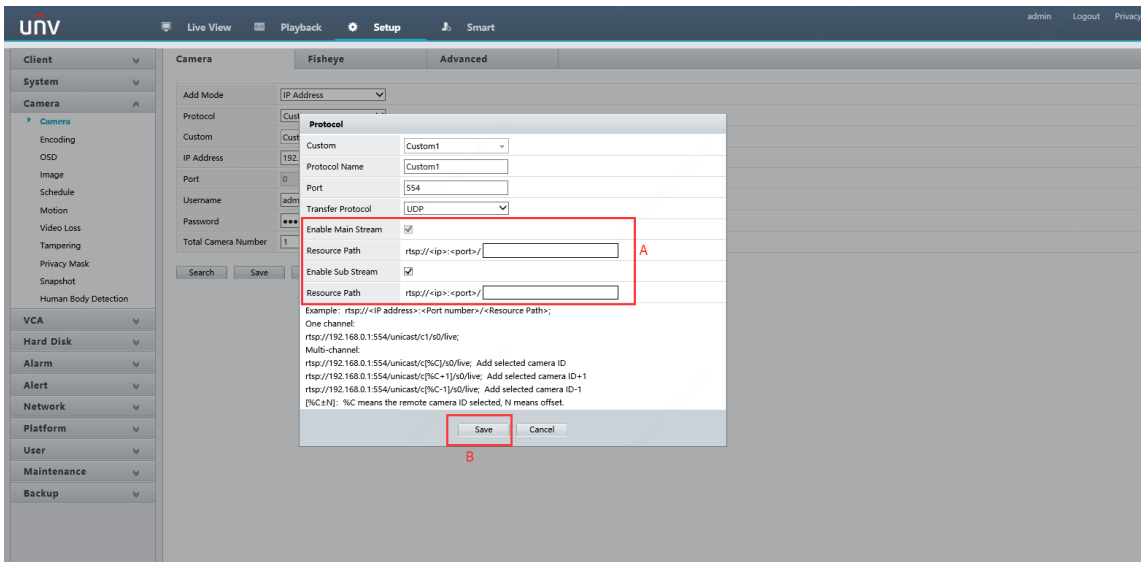


**Step 4** Choose **16** for total camera number and then check **All** and click **Save**. Then NVR A's 16 channels will be added to NVR B.

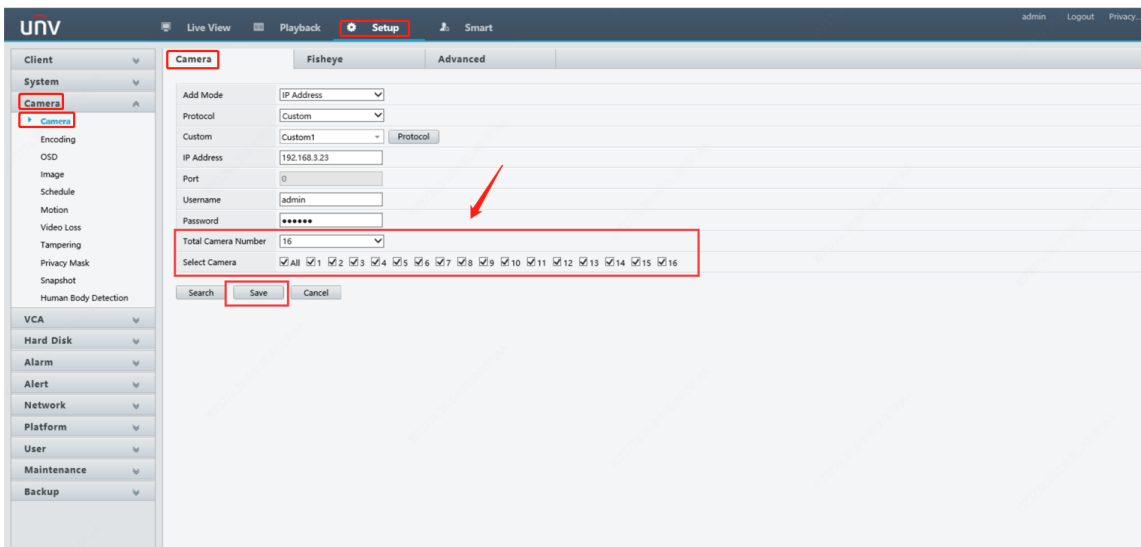


If you want to batch add more channels from NVR A to NVR B, please see below instructions:

**Step 1** Log into NVR B's web interface and click **Add** under **Setup>Camera>Camera**.

Title	How to Batch Add one Uniview NVR's Channels to Another Uniview NVR via RTSP?	Version:	V1.0
Product	NVR	Date	11/21/2023

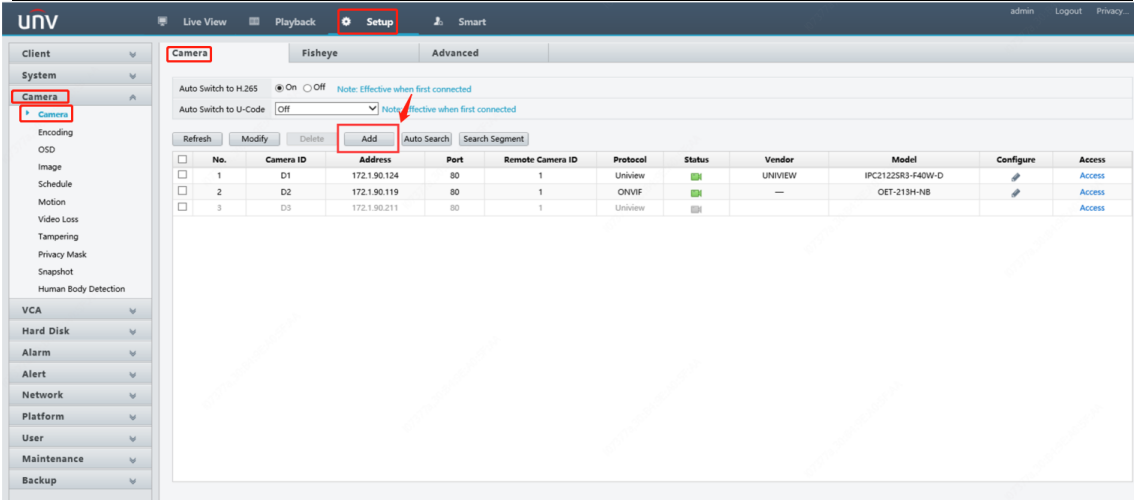

**Step 2** Choose IP Address as the add mode and **Custom2** for custom, then input NVR A's username and password.

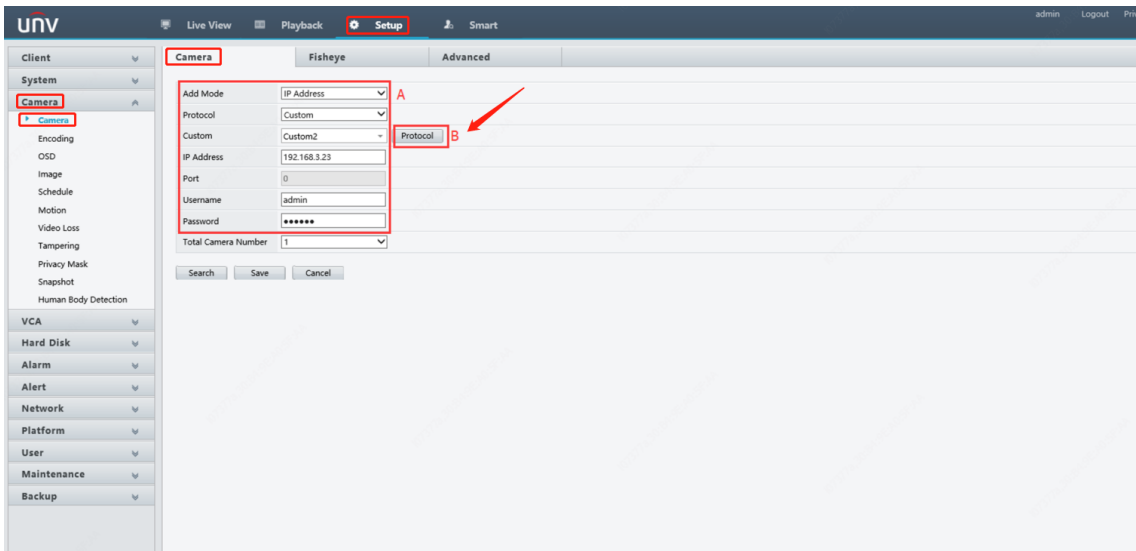


**Step 3** Click **Protocol** and then enable Main Stream and Sub Stream and input the corresponding RTSP urls. Keep the other parameters the default one if you haven't changed them. Click **Save**.


Main stream: unicast/c[%C+16]/s0/live

Sub stream: unicast/c[%C+16]/s1/live

Title	How to Batch Add one Uniview NVR's Channels to Another Uniview NVR via RTSP?	Version:	V1.0
Product	NVR	Date	11/21/2023

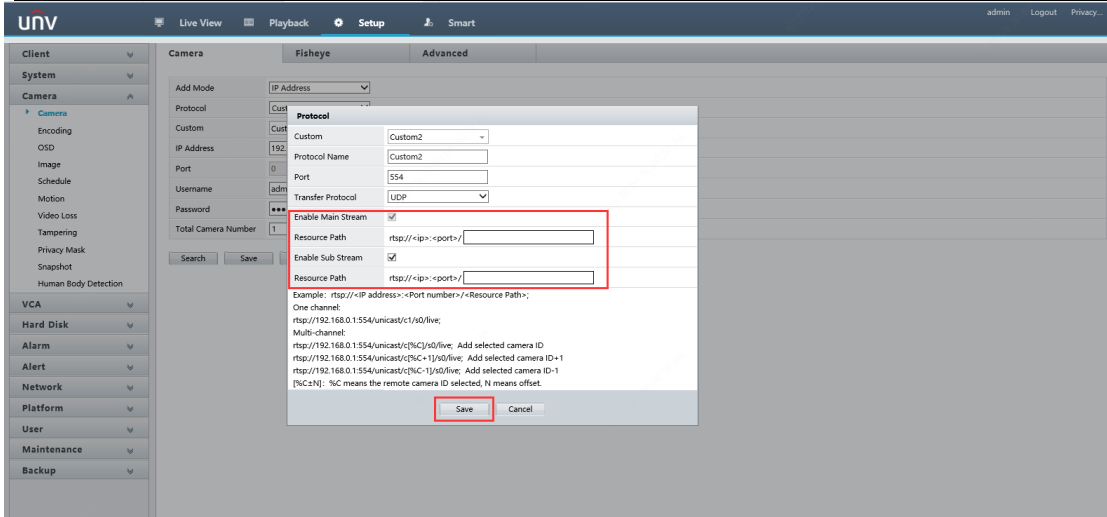

**Step 4** Choose **16** for total camera number and then check **All** and click **Save**. Then NVR A's rest of the 16 channels (channel 17-32) will be added to NVR B as well.

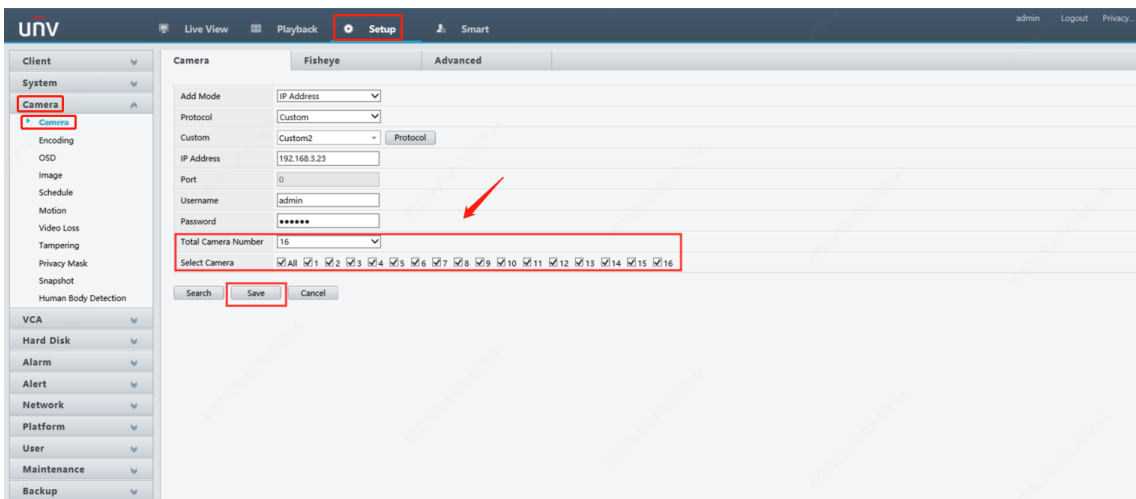

### More knowledge you may also want to know

How to add a single channel of NVR A to NVR B via RTSP?

Follow the first 4 steps above and change the RTSP url only.

*rtsp://NVR ip:port/unicast/c1/s0/live.*

**C1** stands for the first channel of NVR A

**S0** stands for Main stream and **s1** stands for Sub stream.