


EZWall Video Wall Client Software

Introduction

EZWall is mainly used with display&control devices in small-scale systems to manage encoding devices and operate video walls.

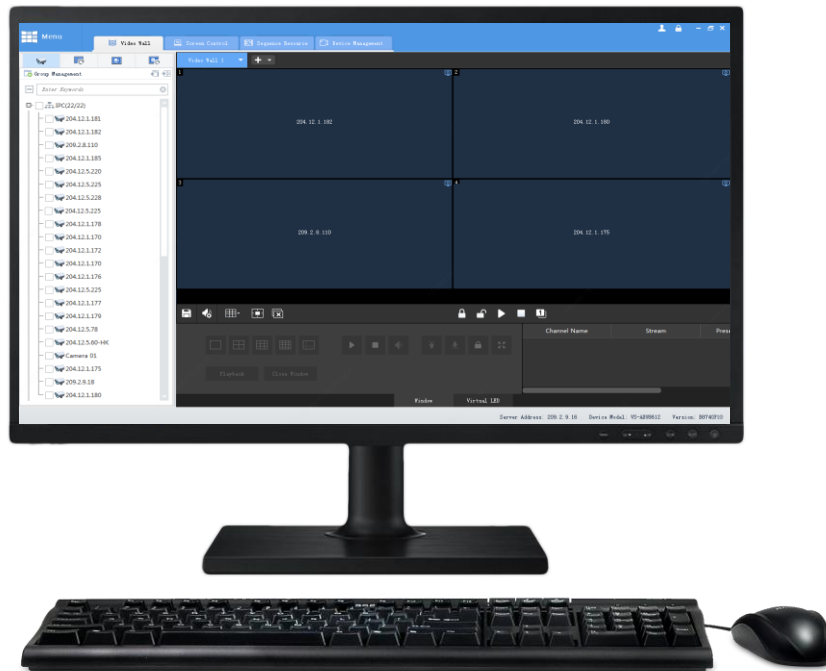

Key Features

- Supports multiple device models including ADU8606, ADU8609, ADU8612, ADU8615, ADU8618, ADU8612-E, DC-B204, DC-B206, and DC-B209.
- Supports Uniview and other manufacturers' IPC and NVR.
- Live view, sequence display, and play signal source on video wall, open windows by one click, split window, window roaming, virtual LED, scenes and scene plans.
- Supports small pixel pitch LED, turn on/off Uniview screens automatically at a set time, turn on/off manually or with a delay.

Specifications

Function	Description
<i>Note: Functions available may vary with the server.</i>	
Device management	Add, edit, and delete devices on LAN Supports automatic search, and allows user to add devices manually
	Open device's Web interface from the client
	View device status, including status of NVR-connected IPCs
	Supports Onvif
Video wall	Add, edit, and delete video walls; supports small pixel pitch LED
	Bind decoding channels automatically, bind decoding channels by one-click, splice screens, custom screen layout
	Scene and scene plan (execute by set time interval or 24-hour schedule)
	Multiple ways to open windows: one click (1/3/4/5/6/7/8/9/10/13/16/17/25/32/36/64 and M*N custom layout), right mouse button, or coordinates
	Window roaming and overlay, double-click window to view in full screen mode, renumber windows, window lock/unlock, display on top/bottom, and view window/split window info
	Start videos in batches on one or multiple screens
	Sequence display videos in one or multiple windows
	Play PC's video signals through server's DVI or VGA interface to the video wall.
	Device group, including default group and custom group
	Virtual LED: LED coordinates, custom LED content, font style, font size, font color, character spacing and alignment, background color and transparency, moving speed and mode; enable/disable virtual LEDs
Supports audio output and volume adjustment	
Sequence resource	Add, edit, and delete sequence resource
Screen control	Turn on/off screen automatically at a set time
	Turn on/off screen manually
	Turn on/off screen with delay
Client configuration	Automatic login to EZWall
	Automatic login to Windows
	Automatically display selected window on top
	Play video with set or adaptive stream type
Help	User manual
Language	Chinese and English
Environment	
OS and min. requirements	OS: 32-bit or 64-bit Microsoft Windows 7, 8, 10
	CPU: Intel Core i5 2.3GHz or higher
	RAM: 4GB or higher

Order Info

Model	Note
EZWall Video Wall Client Software	Free download from Uniview website

Zhejiang Uniview Technologies Co., Ltd.

South Tower, Building 10, Wanlun Science Park, 88 Jiangling Road, Hangzhou, P.R. China 310051

Email: overseasbusiness@uniview.com; globalsupport@uniview.com

<http://www.uniview.com>

©2011-2019 Zhejiang Uniview Technologies Co., Ltd. All rights reserved.

*Product specifications and availability are subject to change without notice.