



How to Set Up Home Position for a Uniview PTZ Camera?

Title:	How to Set Up Home Position for a Uniview PTZ Camera?	Version:	V1.1
Product:	IPC	Date	9/26/2023

How to Set Up Home Position for a Uniview PTZ Camera?

Description

Note: This method is applicable to most scenarios. If the method cannot solve your problem, it is recommended to consult our Tech Support Team.

https://global.uniview.com/Support/Service_Hotline/

Preparation

Video Tutorial:

https://www.youtube.com/watch?v=QSAI1DYJYnQ&list=PLrBaKYrUJkiv_ShCVIqTeIAsOxyFELjR&index=15


Operating Steps

Step 1 Login into the camera's web interface and click + on the PTZ control panel on the live view page to set a preset first.




Step 2 Turn on **Home Position** under **Setup>PTZ>Home Position**.

Title:	How to Set Up Home Position for a Uniview PTZ Camera?	Version:	V1.1
Product:	IPC	Date	9/26/2023

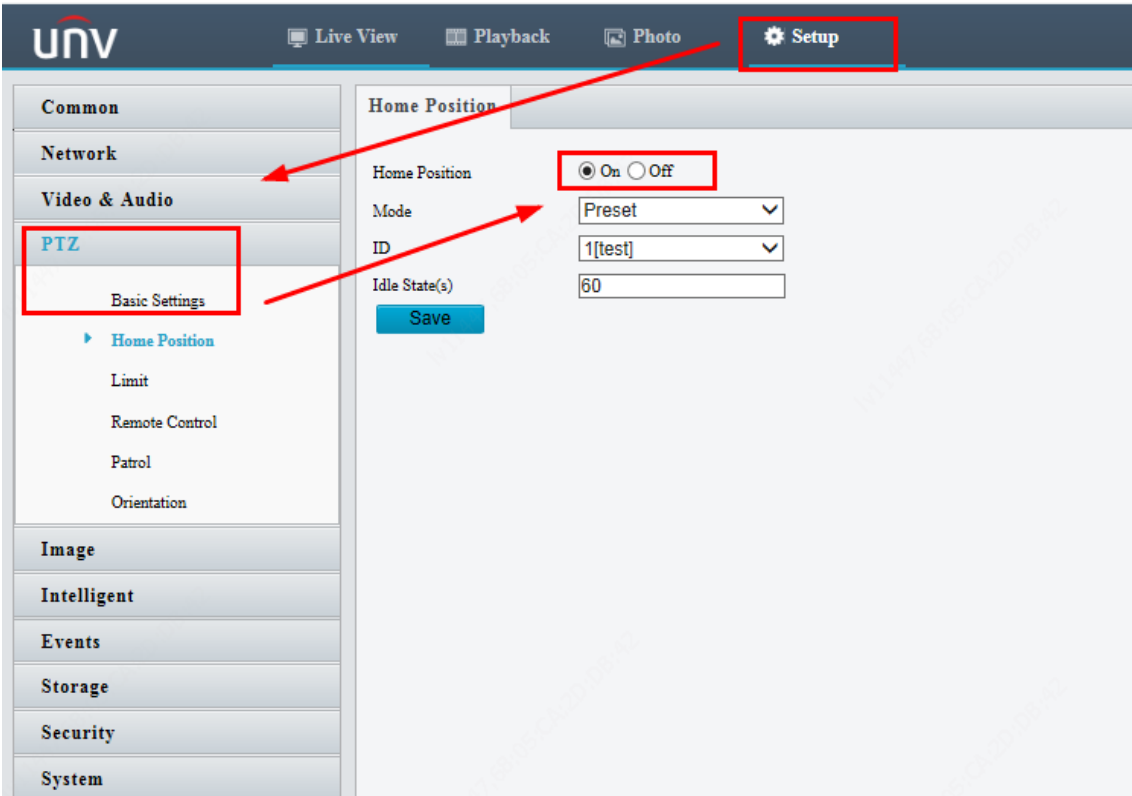

Step 3 Select **one of the presets** as the home position.

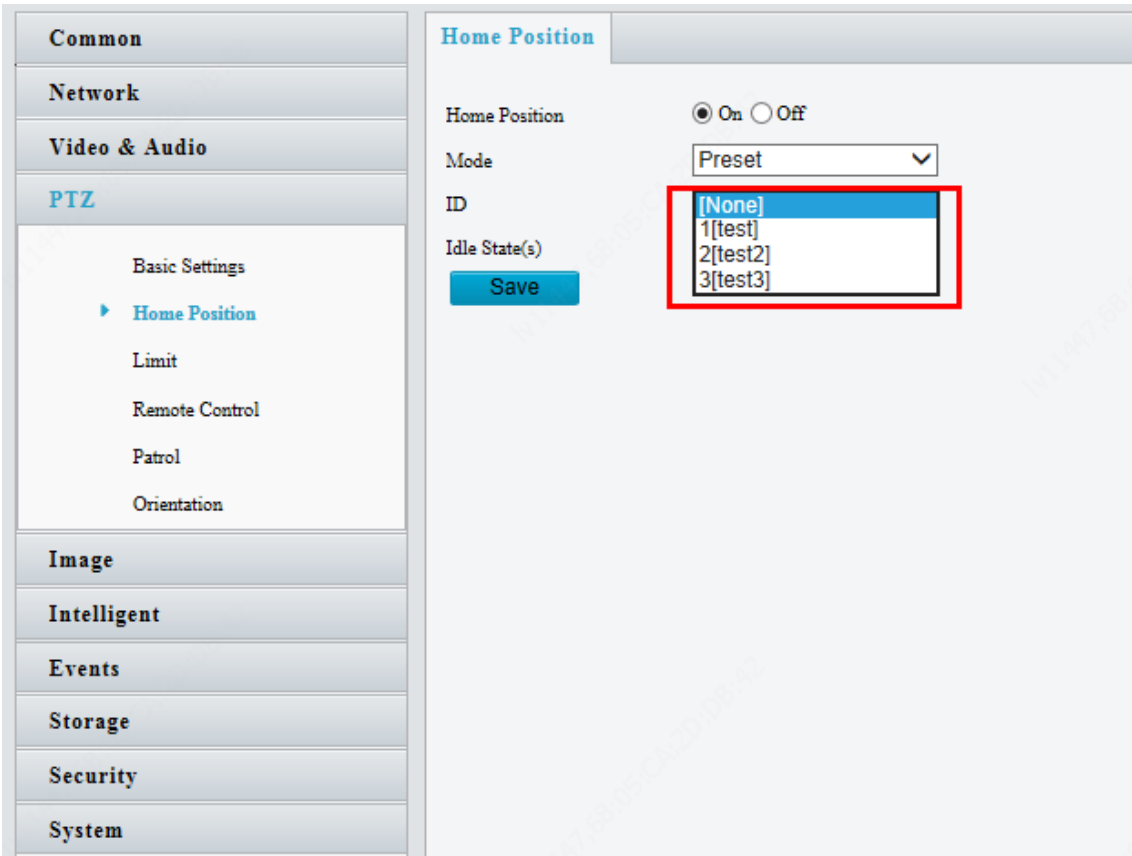

Step 4 Adjust the **Idle State(s)** and then save the configuration.

Title:	How to Set Up Home Position for a Uniview PTZ Camera?	Version:	V1.1
Product:	IPC	Date	9/26/2023

The screenshot shows the UNV camera web interface. The top navigation bar includes 'Live View', 'Playback', 'Photo', and 'Setup'. The left sidebar has a 'PTZ' section with sub-items: 'Basic Settings', 'Home Position', 'Limit', 'Remote Control', 'Patrol', and 'Orientation'. The main content area is titled 'Home Position' and contains the following settings:

- Home Position: On Off
- Mode: Preset (dropdown menu)
- ID: 1[test] (dropdown menu)
- Idle State(s): 60 (text input field, highlighted with a red box)
- Save (button, highlighted with a red box)

A red arrow points from the 'Idle State(s)' field to the 'Save' button. Below this, a red text annotation reads: "When the idle states ends, the camera will return to the Home Position".