



How to Set Up Redundant Recording for a Uniview NVR?

Title:	How to Set Up Redundant Recording for a Uniview NVR?	Version:	V1.0
Product:	NVR	Date:	8/16/2023

How to Set Up Redundant Recording for a Uniview NVR?



Description

Customers may wish to set up redundant recording to make sure they have another safe copy of their recordings. Recordings are saved to normal disks and redundant disks simultaneously.


Note: This method is applicable to most of the scenarios encountered problems, if the method still cannot solve your problem, it is recommended to consult our Tech Support Team.
https://global.uniview.com/Support/Service_Hotline/

Operating Steps


Step 1 Click the Configure column of the hard disk you wish to set up under **Menu> Storage> Hard Disk>Hard Disk** on the NVR's GUI/Monitor or under **Setup>Hard Disk> Hard Disk** on the NVR's web interface. Select **Redundant** as the property.

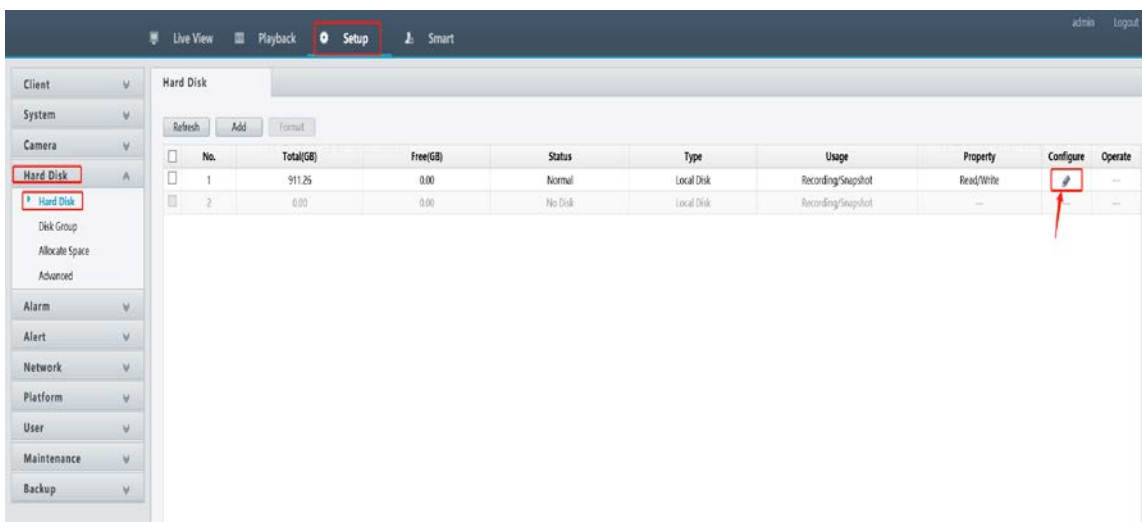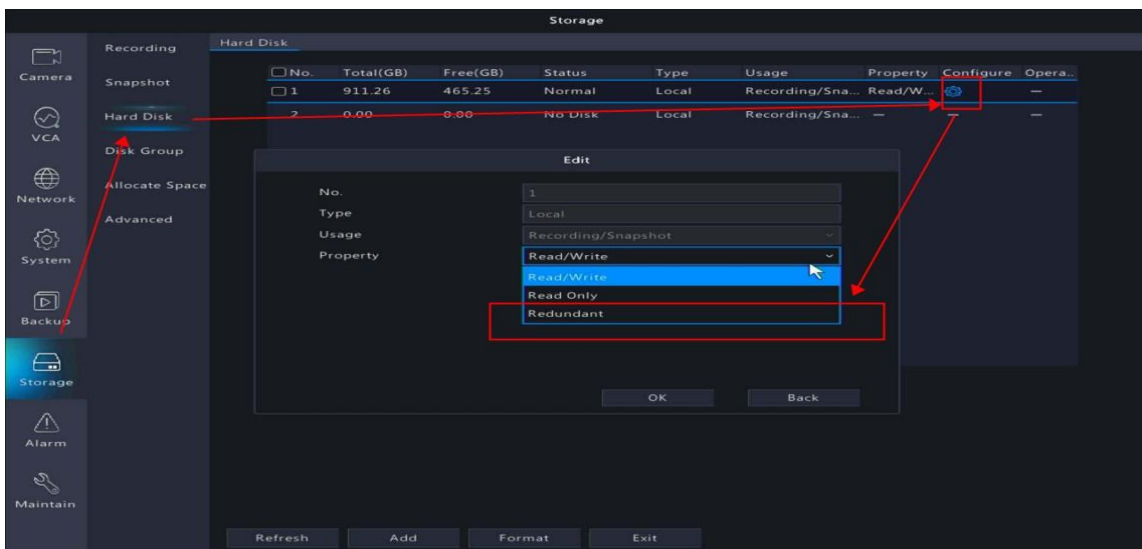


Title:	How to Set Up Redundant Recording for a Uniview NVR?	Version:	V1.0
Product:	NVR	Date	8/16/2023

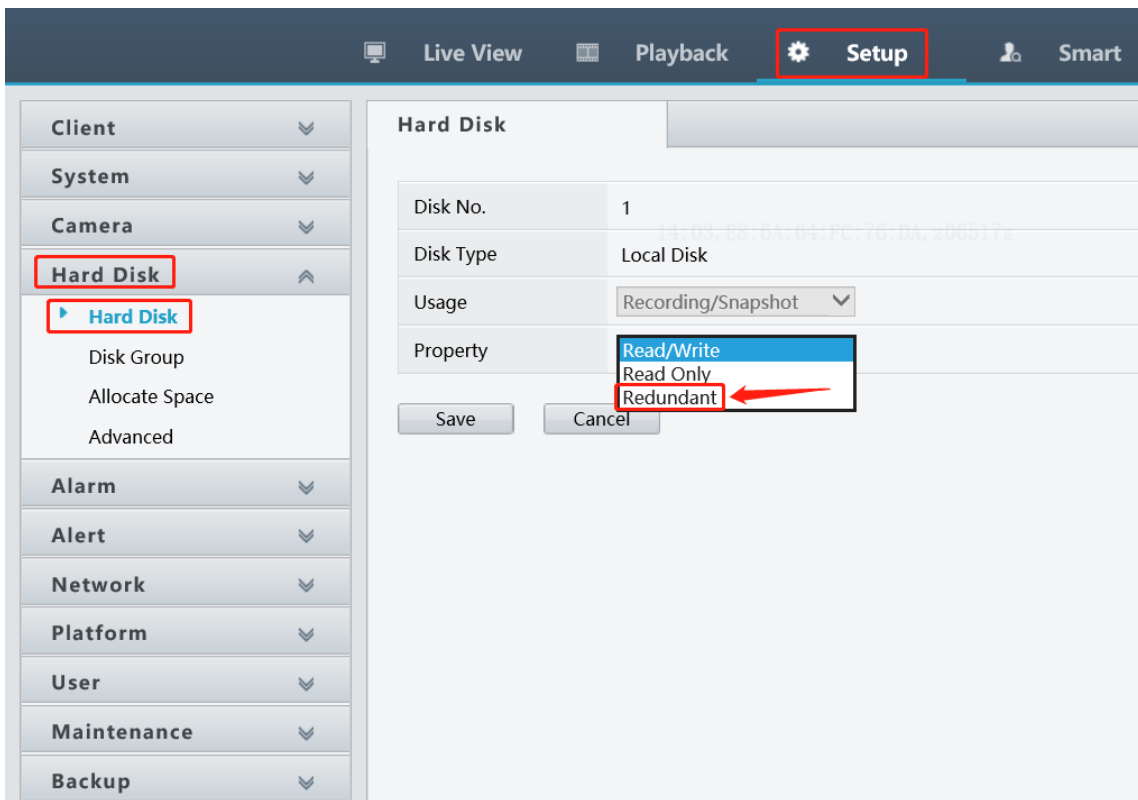

Step 2 Enable Redundant Recording under **Menu>Storage>Recording** on the GUI/Monitor or under **Setup>Camera>Schedule** on the web interface.

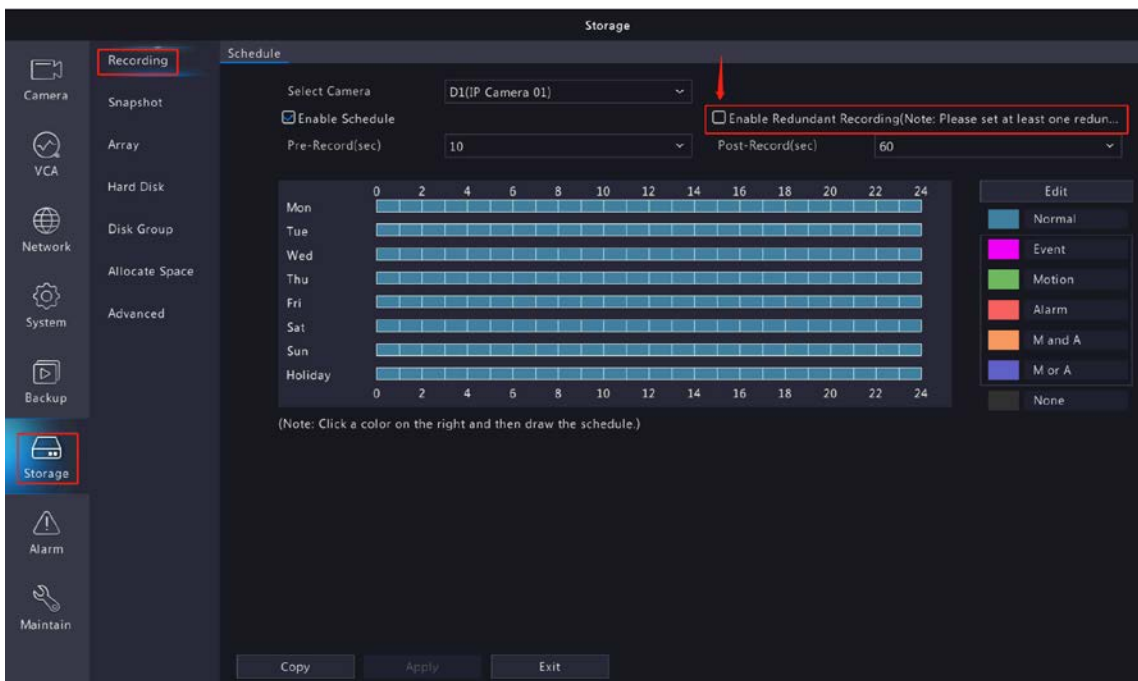

Title:	How to Set Up Redundant Recording for a Uniview NVR?	Version:	V1.0
Product:	NVR	Date	8/16/2023

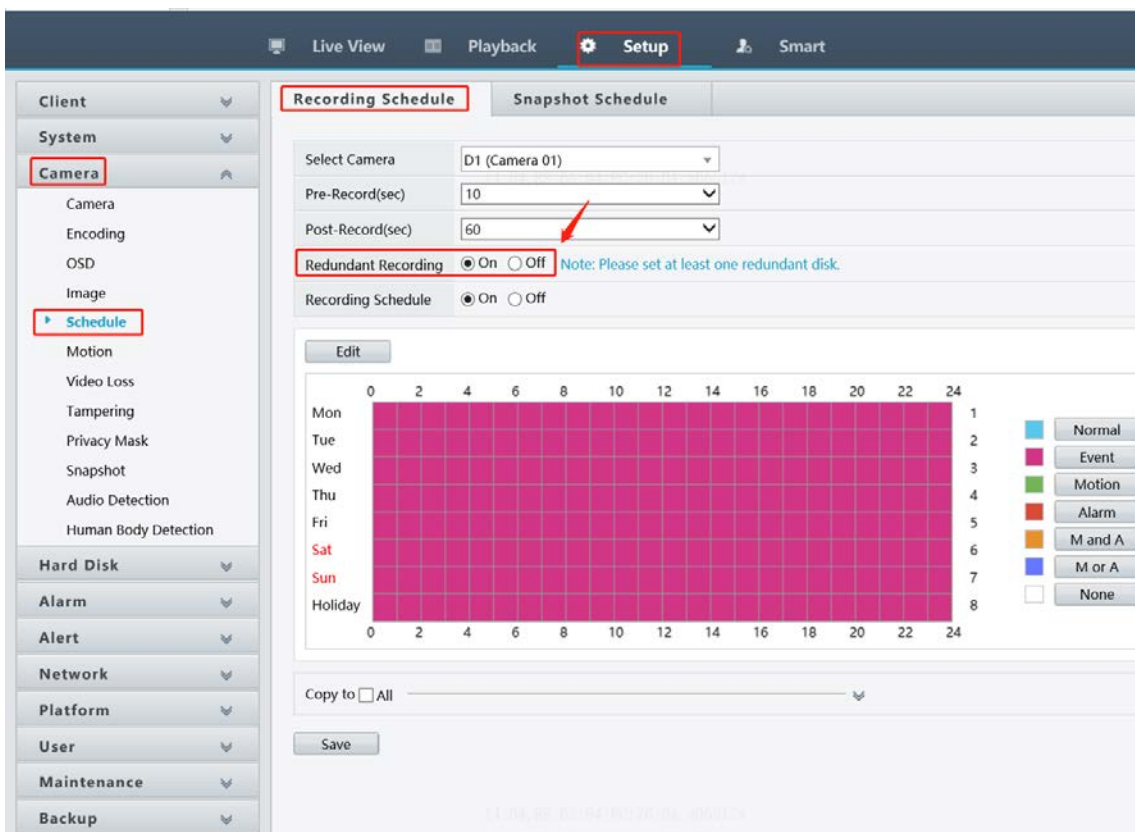

The screenshot shows the 'Setup' menu in the Uniview NVR interface. The 'Recording Schedule' tab is selected. The 'Redundant Recording' option is set to 'On'. The 'Recording Schedule' is also set to 'On'. The 'Pre-Record(sec)' is set to 10 and the 'Post-Record(sec)' is set to 60. A red arrow points to the 'Redundant Recording' option. The 'Recording Schedule' is a 7-day grid showing recording times from 0 to 24 hours. The grid is currently empty, indicating no recording is scheduled. A legend on the right shows various recording types: Normal (blue), Event (pink), Motion (green), Alarm (orange), M and A (yellow), M or A (purple), and None (white). The 'Copy to' dropdown is set to 'All'. The 'Save' button is at the bottom.

Note: To view recordings on a redundant disk, you need to change the disk property to **Read Only**.