



# **How to Change a Uniview NVR's Admin Password?**

Title	How to Change a Uniview NVR's Admin Password?	Version:	V1.1
Product	NVR	Date	9/26/2023

# How to Change a Uniview NVR's admin Password?


## Description

**Note:** This method is applicable to most of the scenarios. If the method still cannot solve your problem, it is recommended to consult our Tech Support Team.

[https://global.uniview.com/Support/Service\\_Hotline/](https://global.uniview.com/Support/Service_Hotline/)


## Operating Steps

Modify the NVR's admin password from the monitor/GUI under **Menu>System>User**. Click **Edit** on the admin user row, input the old and new passwords, confirm and click **OK**.

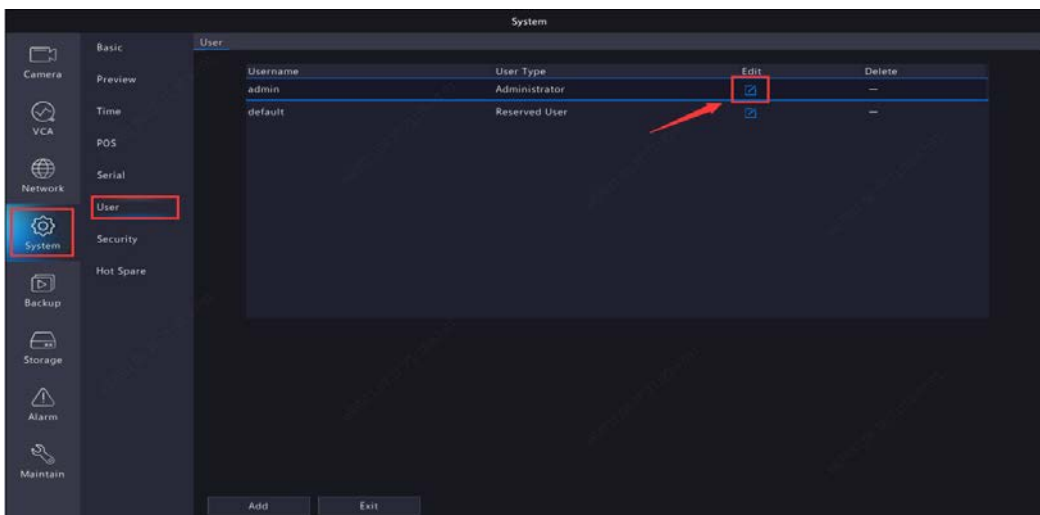

Modify the NVR's admin password from the NVR's web interface under **Setup > User > User**.

Check the admin user and click **Modify**, input the old password, new password, confirm, and click **OK**.

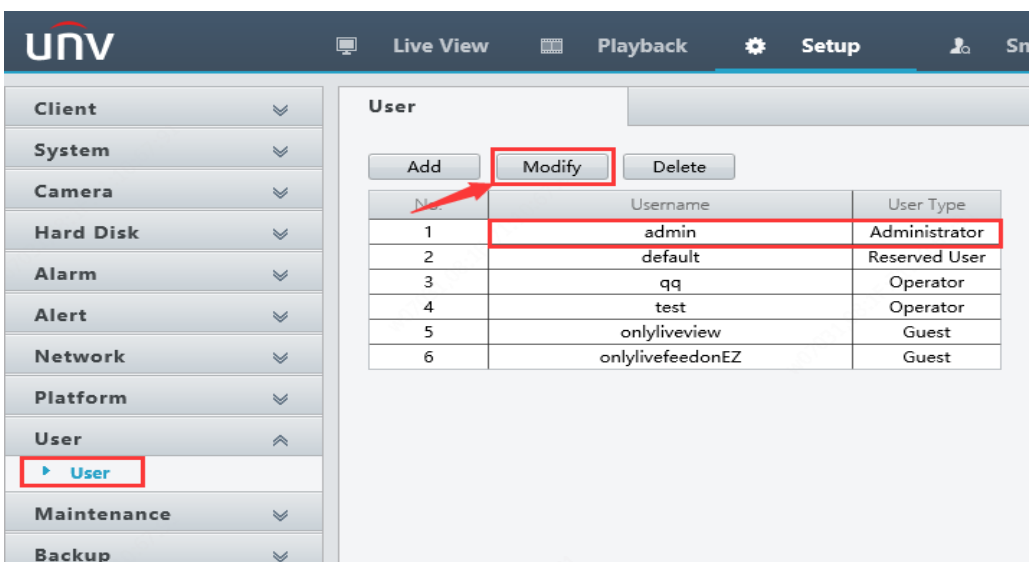

Title	How to Change a Uniview NVR's Admin Password?	Version:	V1.1
Product	NVR	Date	9/26/2023

**Note:** The email for retrieving the NVR's password can be set up or changed from here as well.