



How to Disable the Unlock Pattern on a Uniview NVR's Monitor (GUI)?

Title	How to Disable the Unlock Pattern on a Uniview NVR's Monitor (GUI)?	Version:	V1.1
Product	NVR	Date	9/26/2023

How to Disable the Unlock Pattern on a Uniview NVR's Monitor (GUI)?

Description


Note: This method is applicable to most of the scenarios. If the method still cannot solve your problem, it is recommended to consult our Tech Support Team.

https://global.uniview.com/Support/Service_Hotline/

Operating Steps

Step 1 Log into the NVR on the monitor.

Step 2 Edit the admin user under **System>User** and input the login password.

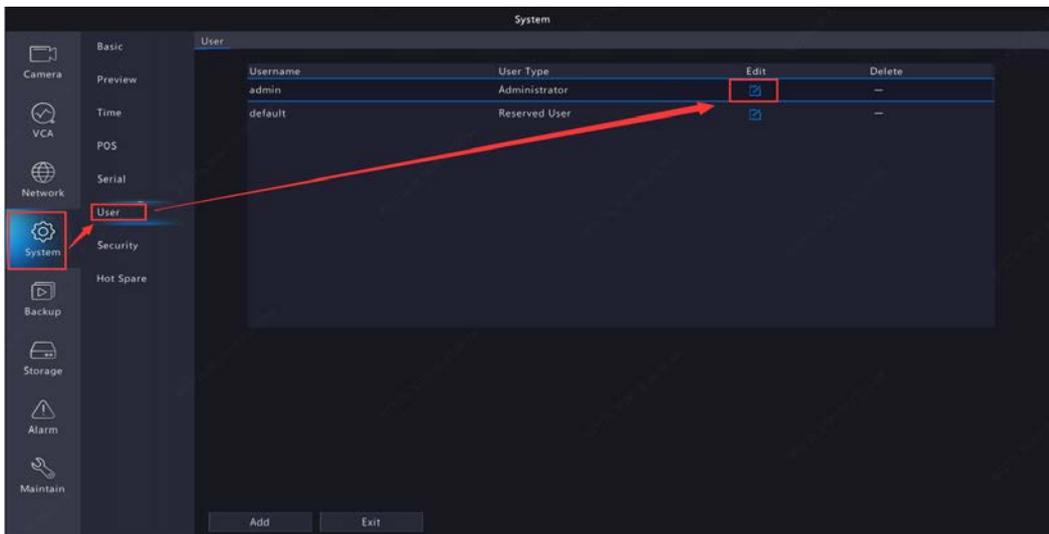

Step 3 Uncheck the **Enable Unlock Pattern** on the pop-up window and click **OK** to save it.

