



How to Add Cameras to a Uniview Non-PoE NVR?

Title	How to Add Cameras to a Uniview Non-PoE NVR?	Version:	V1.1
Product	NVR	Date	9/26/2023

How to Add Cameras to a Uniview Non-PoE NVR?

Description


Note: This method is applicable to most of the scenarios, if the method still cannot solve your problem, it is recommended to consult our Tech Support Team.

https://global.uniview.com/Support/Service_Hotline/

Operating Steps

Add from NVR's GUI


Step 1 Check the Hardware connection and topology.

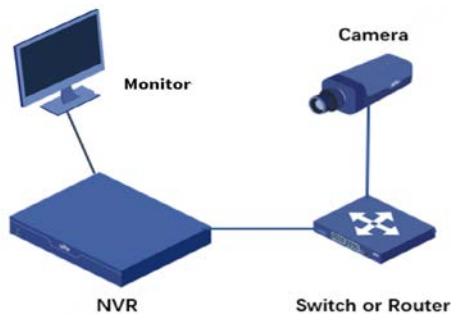

Step 2 Check and make sure that the IP address of all cameras and the NVR are in the same network segment.



Note:

1. The NVR may have multiple IP addresses, it depends on which NVR NIC/ Ethernet port the cameras are connected to.
2. The IP address of NVR can be found in Menu>Network>TCP/IP.

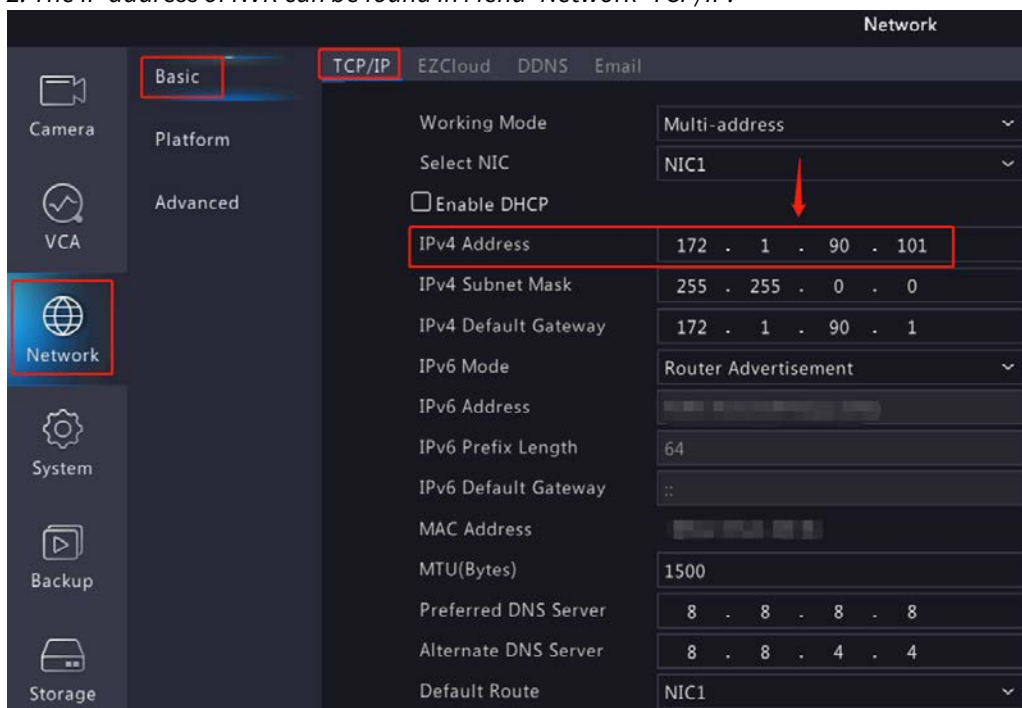

Title	How to Add Cameras to a Uniview Non-PoE NVR?	Version:	V1.1
Product	NVR	Date	9/26/2023

Step 3 You can either click **Add All** to add all discovered cameras or click **Custom Add** to enter the IP address of the camera to manually add it. You may also click **Search Segment** and add discovered cameras in the list.

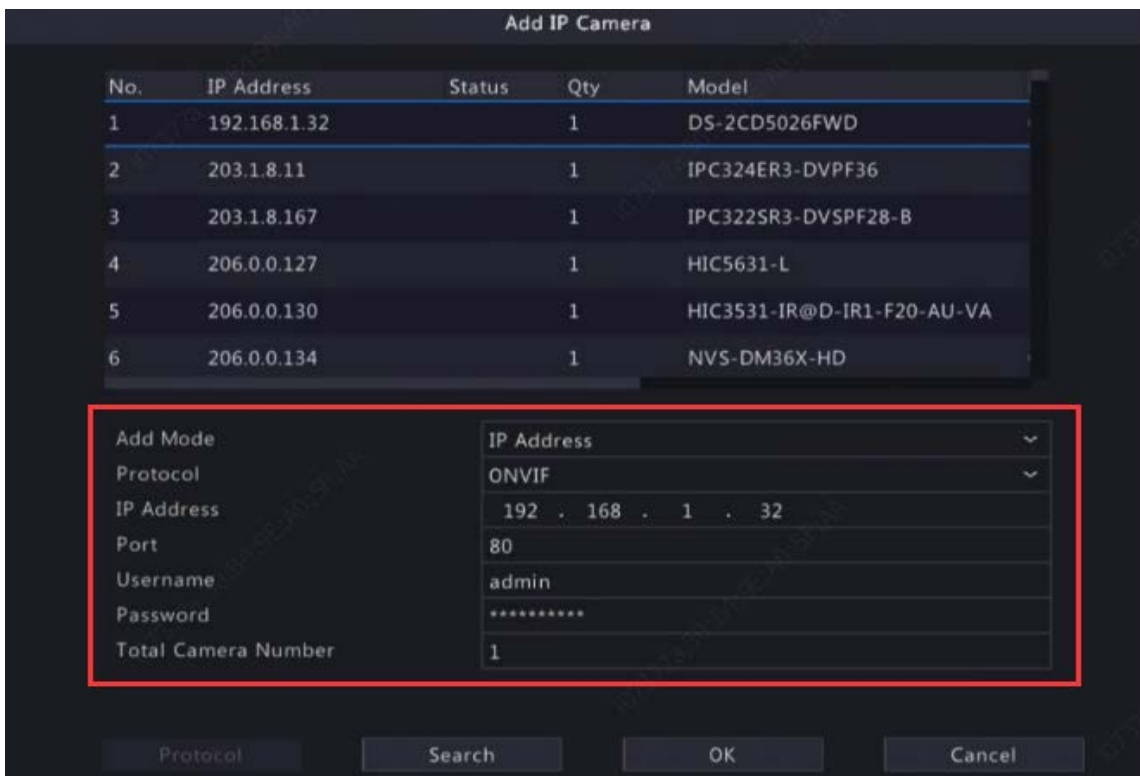
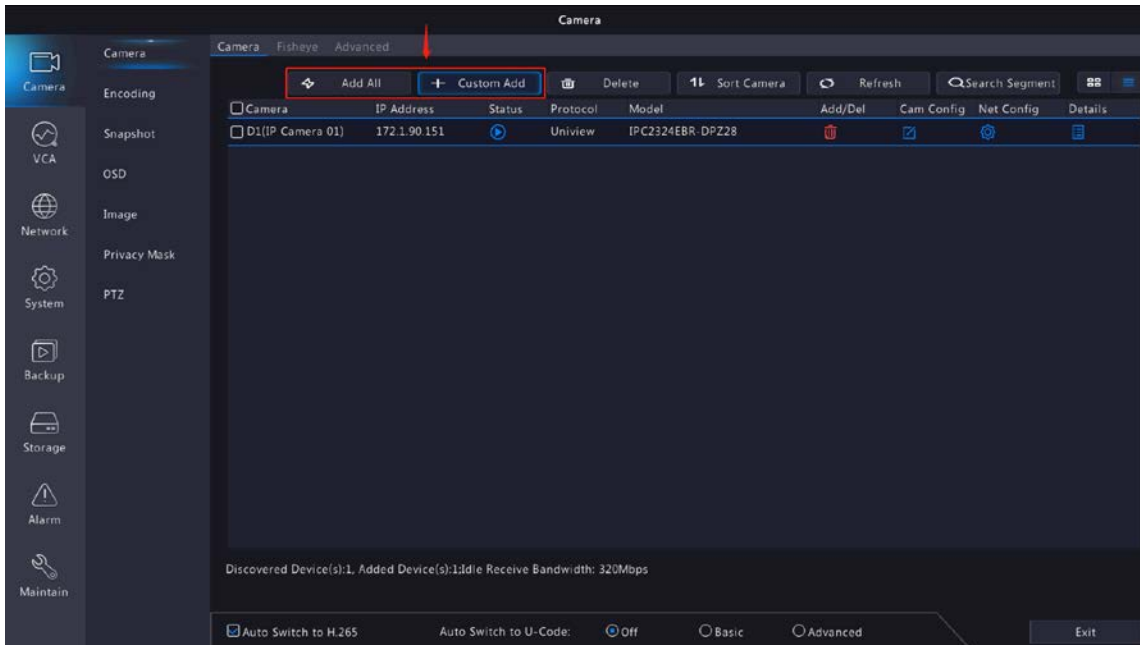


Add from NVR's web interface

Step1 Click **Auto Search** on the NVR's web interface under **Setup>Camera> Camera**.

Step 2 Select cameras (cameras which are not added) in the device list on the pop-up window, and click **OK**.

Title	How to Add Cameras to a Uniview Non-PoE NVR?	Version:	V1.1
Product	NVR	Date	9/26/2023

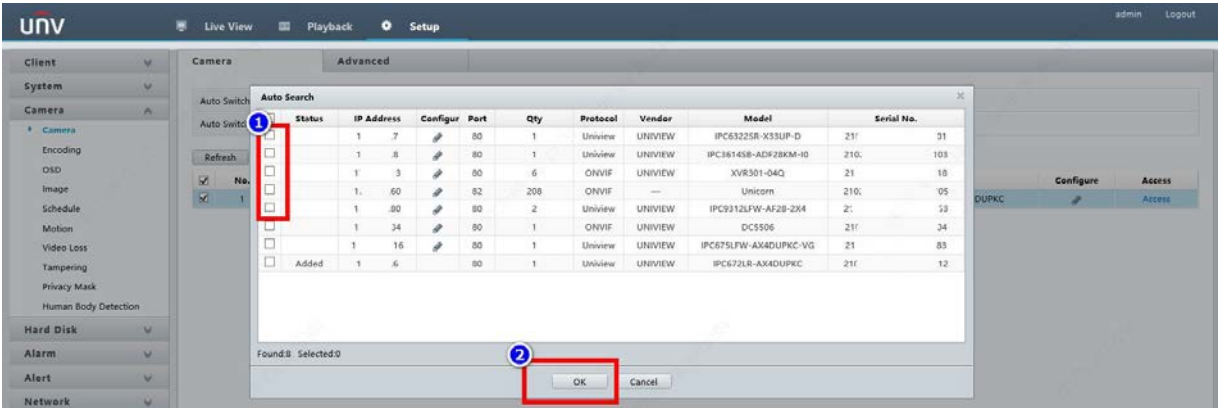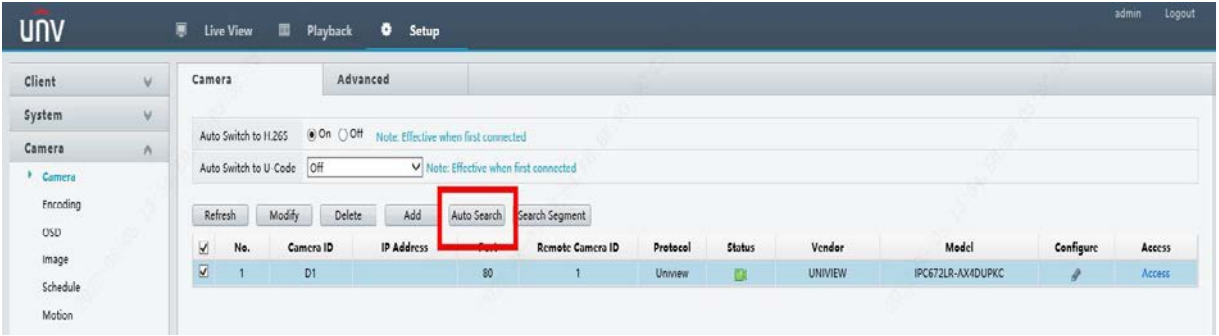

Step 3 If the IP address of a camera fails to be detected then please do manually add. Enter the IP address of the camera and complete other settings, and then click **Add**. You may also click **Search Segment** and add discovered cameras in the list.

