



How to Change an Analog Camera's Resolution and Frame Rate?

Title:	How to Change an Analog Camera's Resolution and Frame Rate?	Version:	V1.1
Product:	IPC	Date	9/26/2023

How to Change an Analog Camera's Resolution and Frame Rate?

Description


Note: This method is applicable to most scenarios. If the method cannot solve your problem, it is recommended to consult our Tech Support Team.

https://global.uniview.com/Support/Service_Hotline/

Operating Steps

GUI Operation

Step 1 Click the PTZ control icon to go to the **OSD Menu** on the live view screen tool bar. And then click Enter to open the OSD menu of your analog camera.

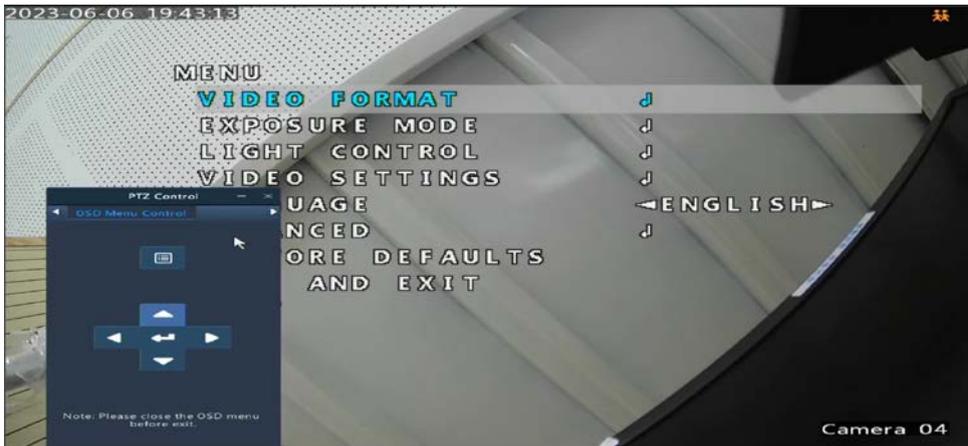

Note: For some cameras with old firmware, you may need to click the **Iris +** button on the PTZ control panel to get the **OSD Menu**.

Step 2 You can change all the encoding settings such as resolution, exposure, day/night mode, etc. through clicking on the arrows and pressing  on the PTZ control panel.



Title:	How to Change an Analog Camera's Resolution and Frame Rate?	Version:	V1.1
Product:	IPC	Date	9/26/2023

Web Interface Operation

Step 1 Click the PTZ control icon to go to the **OSD Menu** on the right side of camera's live view. And then click Enter to open the OSD menu of your analog camera.



Note: For some cameras with old firmware, you may need to click the **Iris +** button on the PTZ control panel to get the **OSD Menu**.

Step 2 Likewise, you can change all the encoding settings such as resolution, exposure, day/night mode, etc. through clicking on the arrows and pressing  on the PTZ control panel.

