



How to Check the Current Firmware Version of a Uniview Device?

Title:	How to Check the Current Firmware Version of a Uniview Device?	Version:	V1.1
Product:	IPC	Date	9/26/2023

How to Check the Current Firmware Version of a Uniview Device?

Description


Note: This method is applicable to most scenarios. If the method cannot solve your problem, it is recommended to consult our Tech Support Team.

https://global.uniview.com/Support/Service_Hotline/

Operating Steps


Check from EZTools

Please make sure that the device can be detected. Here is the typical connection that can be referred to.

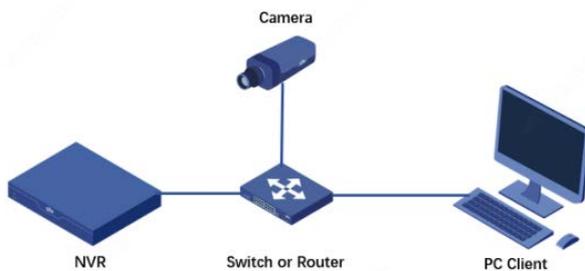


Device versions can be found under the following path:

EZTools 3.0

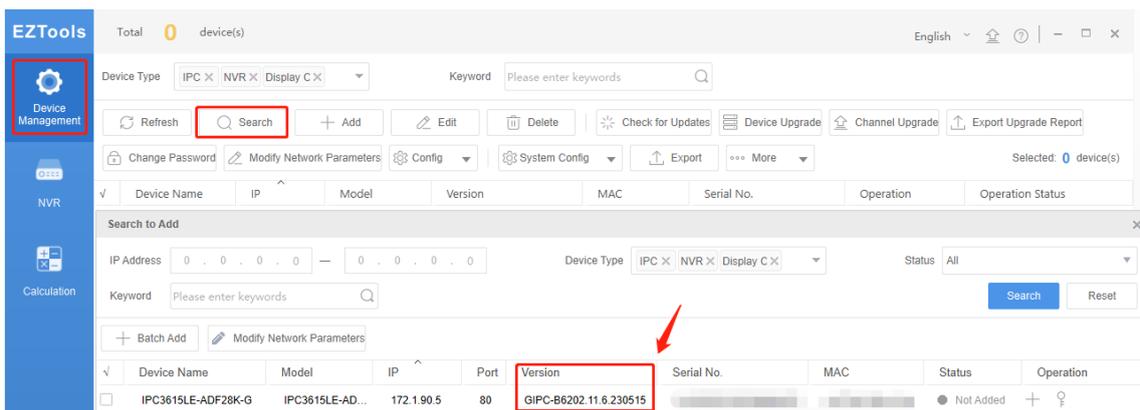


EZTools 2.0

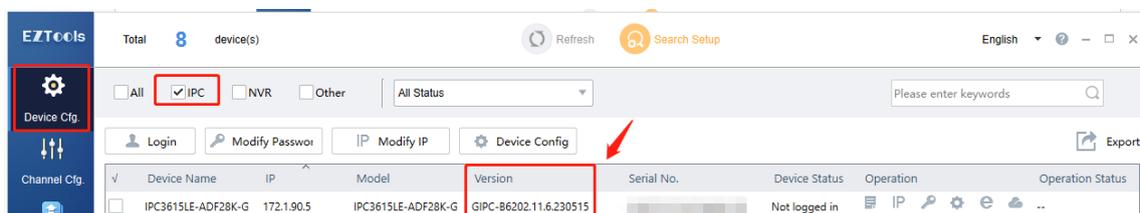


Note: Don't forget to check different types of devices on the top left side under Total device number.

Title:	How to Check the Current Firmware Version of a Uniview Device?	Version:	V1.1
Product:	IPC	Date	9/26/2023

EZTools 1.0

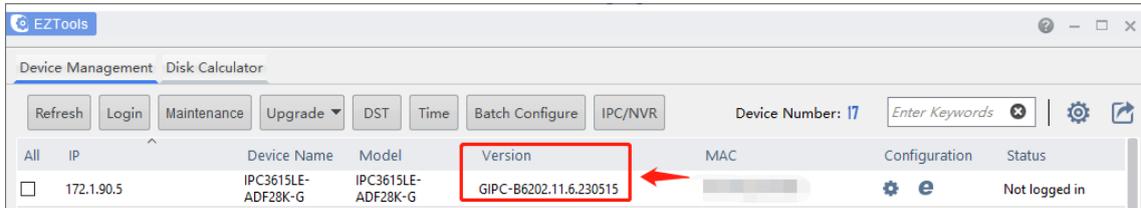


Note: Click the Gear icon on the right side of the Type box to set up the list items of the detected devices.

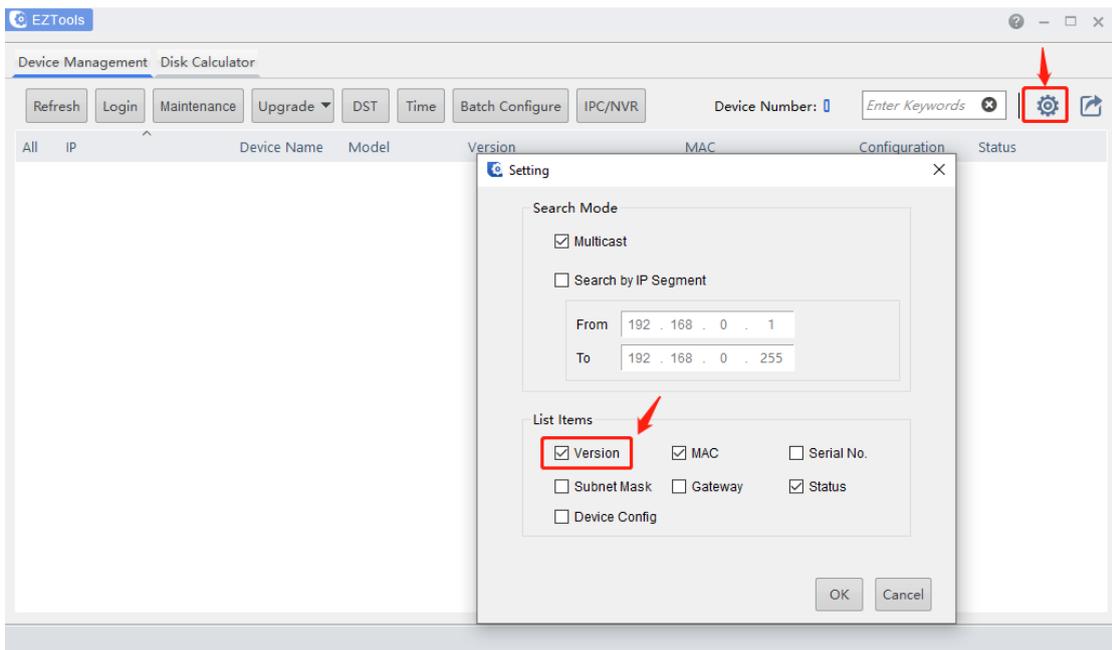

Check from the web interface of the device.

For IP camera

The firmware version can be found under **Setup>Common>Basic info>Basic info**

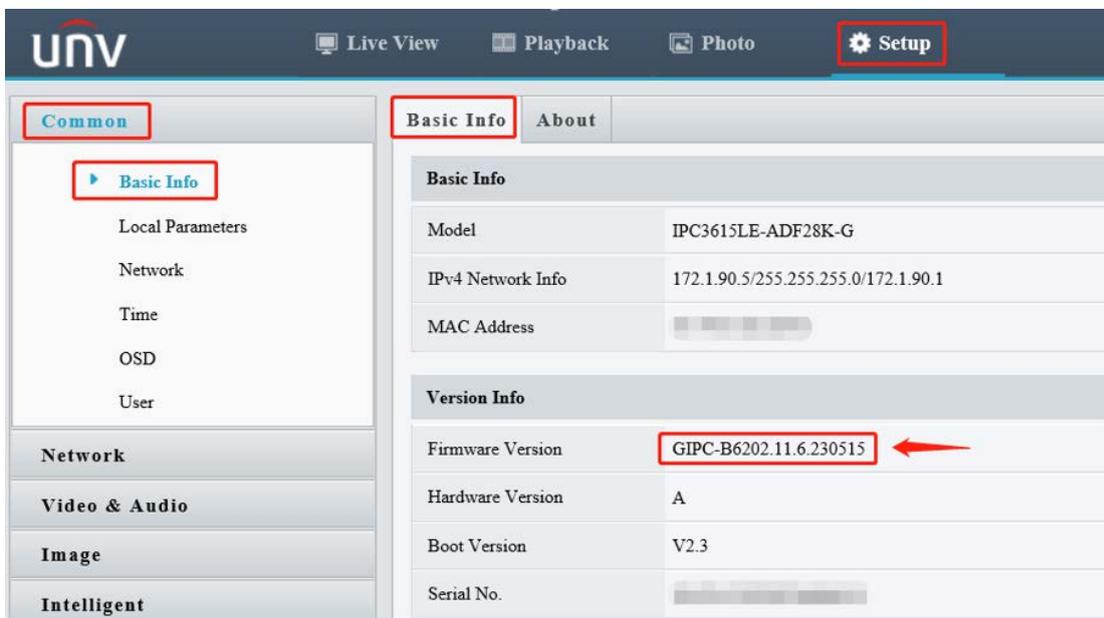


Title:	How to Check the Current Firmware Version of a Uniview Device?	Version:	V1.1
Product:	IPC	Date	9/26/2023

For NVR

Check from the web interface of an NVR

The firmware version can be found under **Setup>System>Basic Setup**.

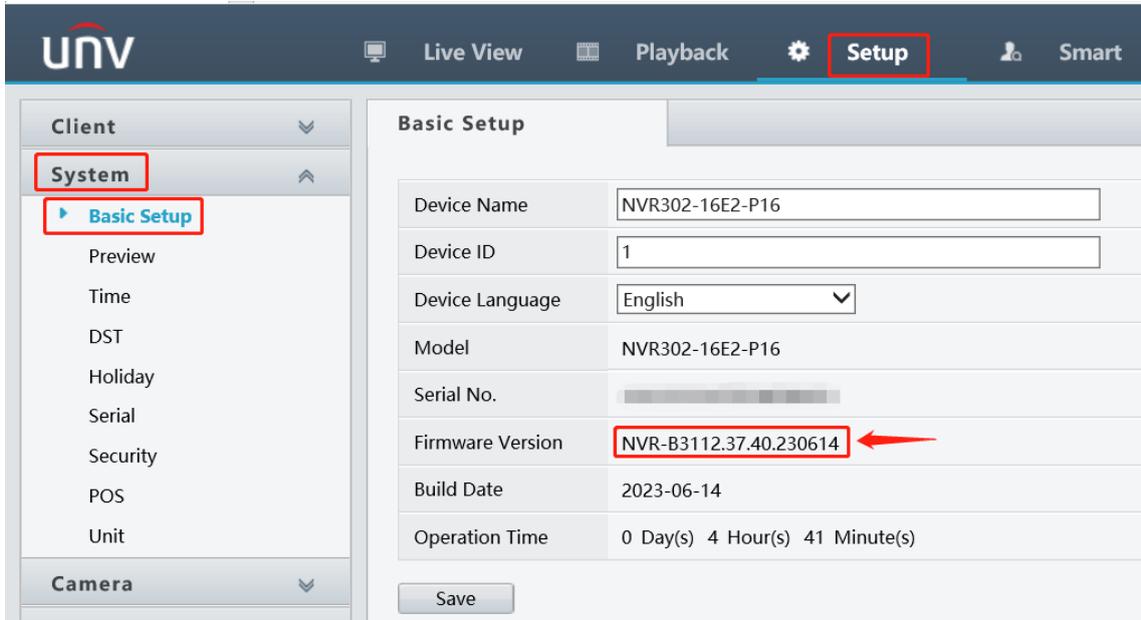

Check from the GUI of an NVR

Log into the NVR from the monitor. The firmware version of your NVR can be found under **Menu>Maintain>System Info>Basic Info**.

