



How to Change a Uniview NVR's Time Settings?

Title	How to Change a Uniview NVR's Time Settings?	Version:	V1.2
Product	NVR	Date	11/24/2023

How to Change a Uniview NVR's Time Settings?


Description

Note: This method is applicable to most of the scenarios encountered problems, if the method still cannot solve your problem, it is recommended to consult our Tech Support Team.
https://global.uniview.com/Support/Service_Hotline/

Operating Steps


Change from your NVR's web interface

The time settings can be modified under **Setup>System>Time** on the NVR's web interface.

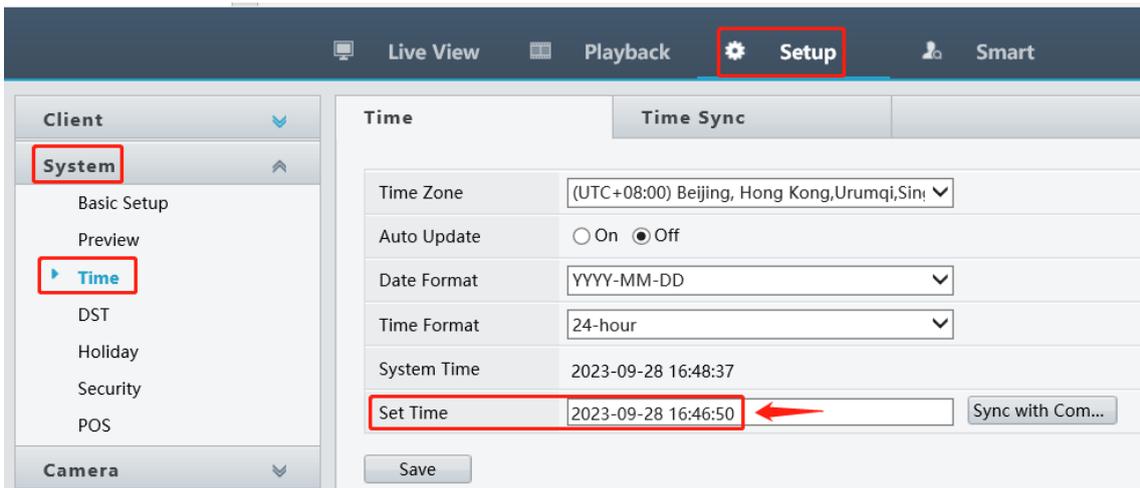

Change from your NVR's monitor

The time settings can also be modified under **Menu>System>Time** on the NVR's GUI/Monitor.

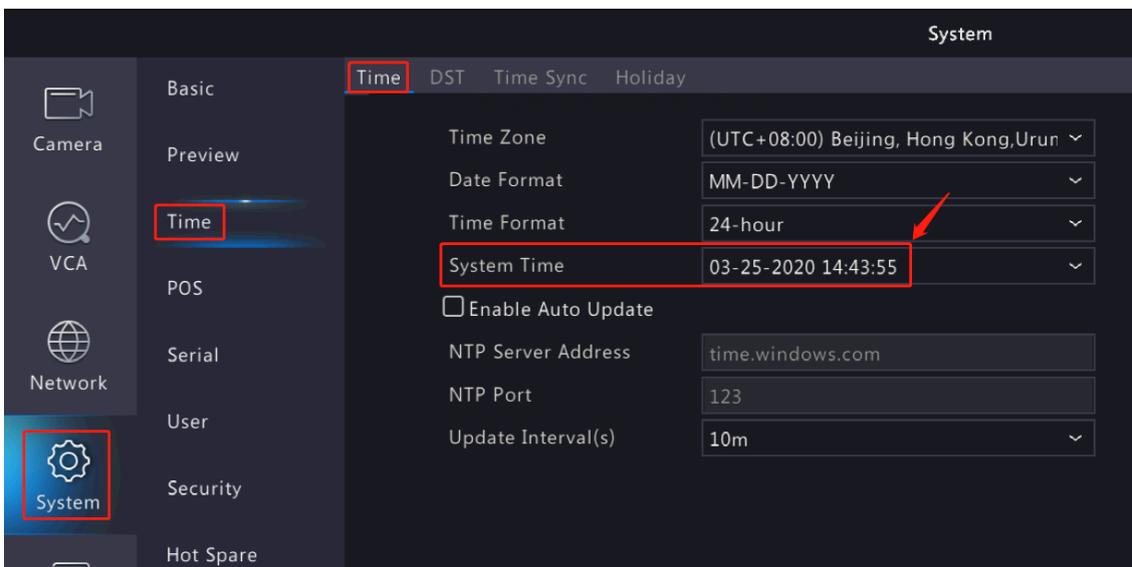


Title	How to Change a Uniview NVR's Time Settings?	Version:	V1.2
Product	NVR	Date	11/24/2023

Change from EZools

Guide for EZTools 3.0.


Step 1 Add the NVR to management and then check the device and change its time settings under **Device Management>Config>Baisc Config**.

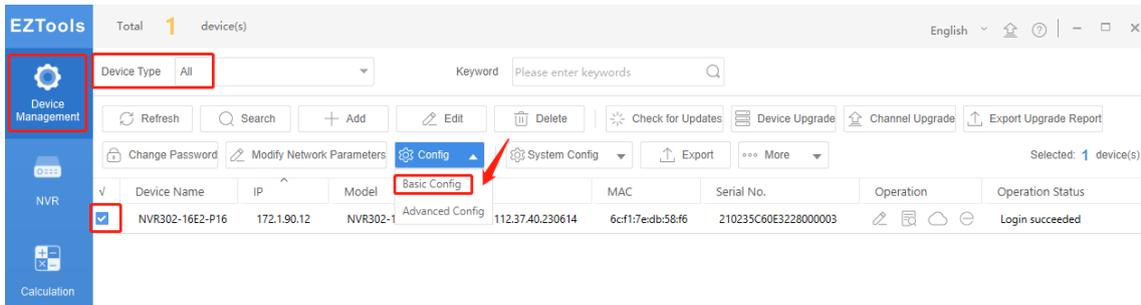

Step 2 Set up the time zone and then choose a way to change your NVR's system time.

Sync with computer time: Click **Sync with Computer Time** to sync the device's system time with the computer's system time.


Enable Auto Update: Set the NTP server address, port, and update interval, and the device's system time will automatically synchronize with the NTP server time.

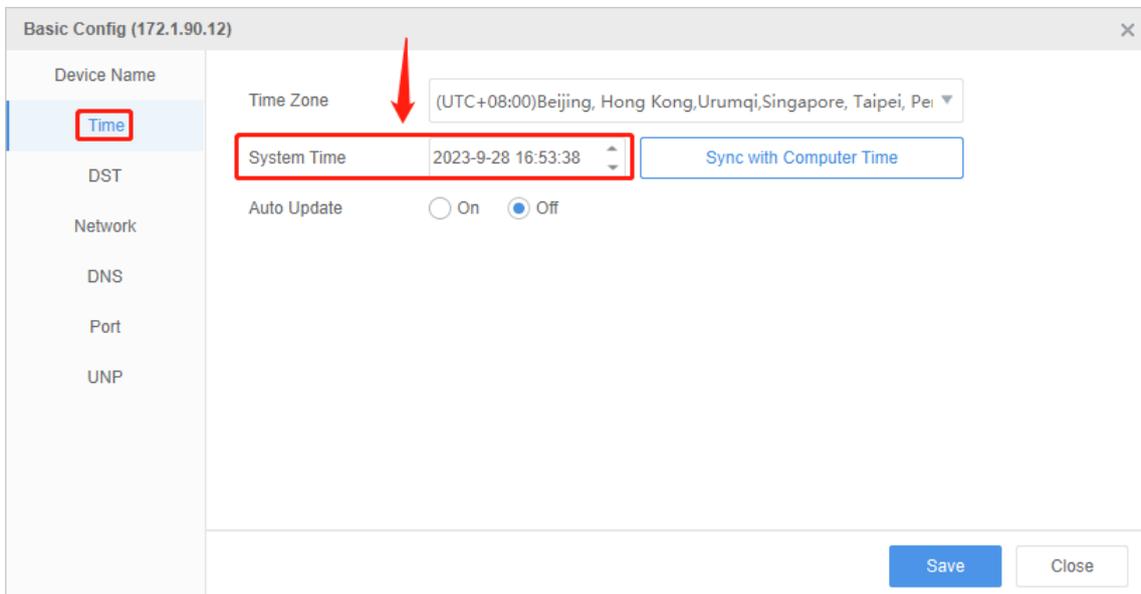


Guide for EZTools 2.0.

Step 1 Install **EZtools 2.0** on your computer and open it. Check the NVR that you need to change the time settings.


Step 2 Click **Refresh** to search for the NVR, **check NVR** from **Device Cfg** to find devices in the local network.

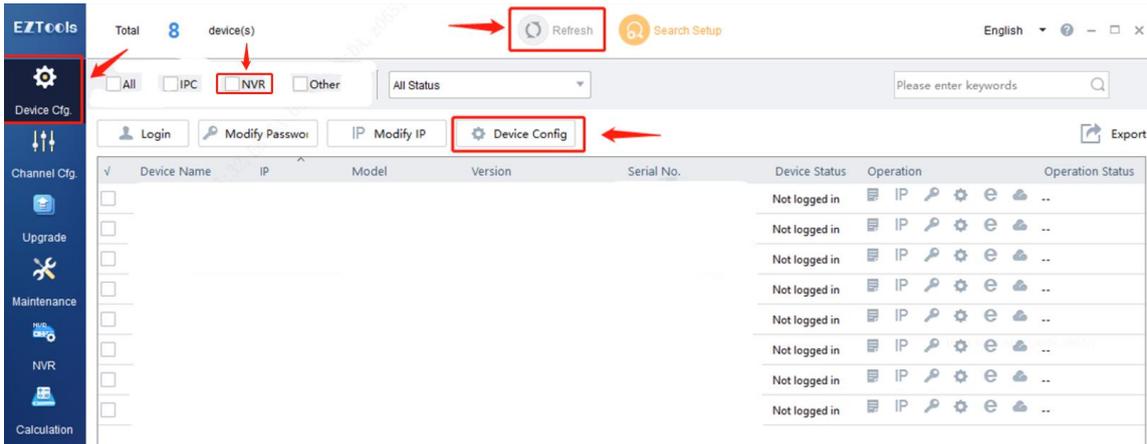

Step 3 Click **Device Config** and then enter the login credentials of your device. Click **OK**.

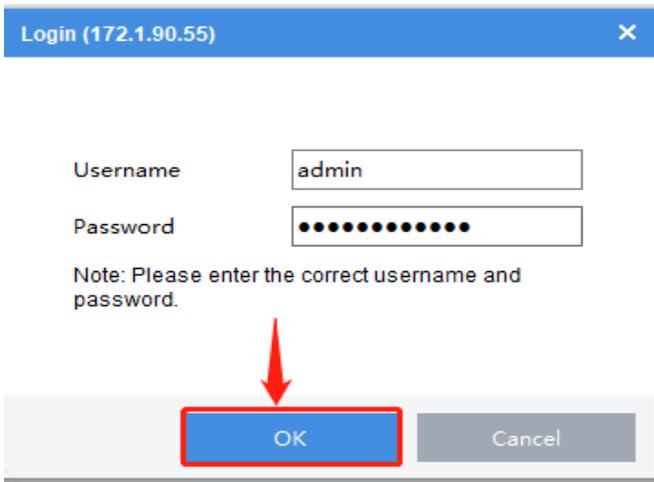

Step 4 Click **Time** and then you can change the NVR's time or time zone manually or synchronize the NVR's time with the one on your computer. Don't forget to click **Save** after these changes.


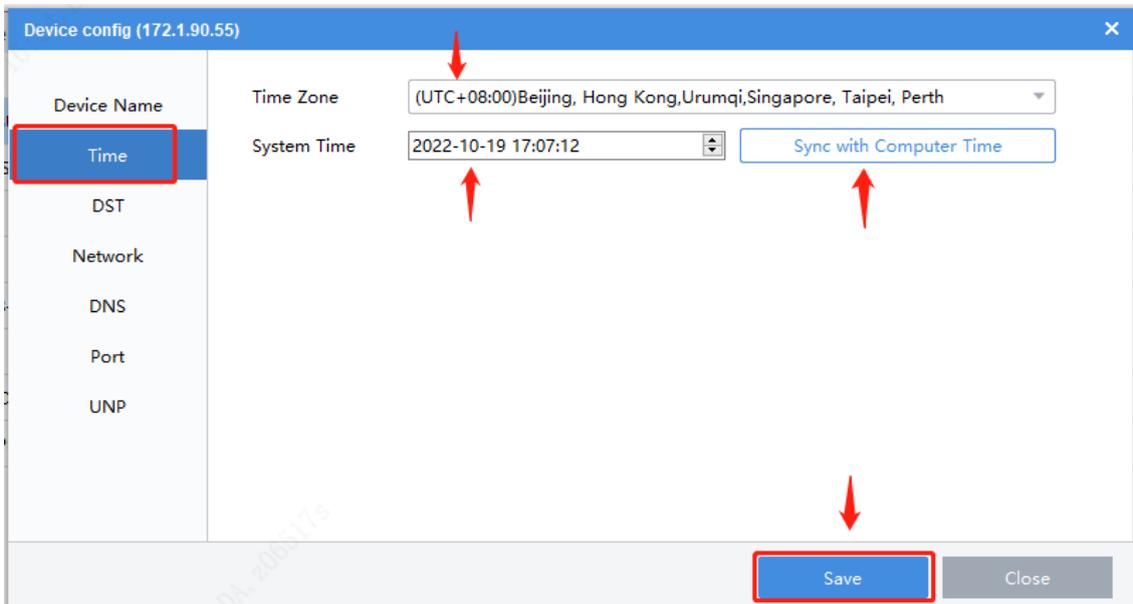


Title	How to Change a Uniview NVR's Time Settings?	Version:	V1.2
Product	NVR	Date	11/24/2023


Guide for EZTools 1.0

Step 1 Install **EZTools** on your computer and open it. Check the NVR that you want to change the time settings.

Step 2 Click **Time** and enter the NVR's login credentials. Click **OK**.

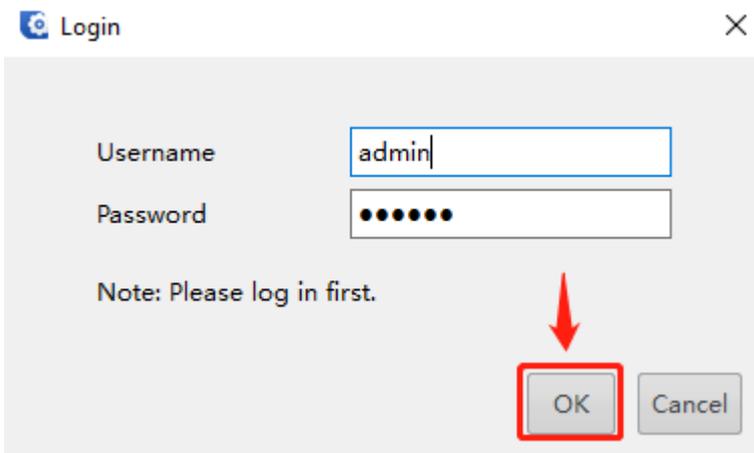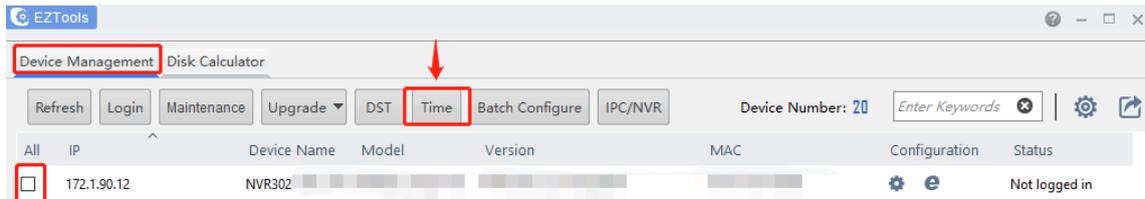


Step 3 Change the NVR's time or time zone manually or synchronize the NVR's time with your computer's time.

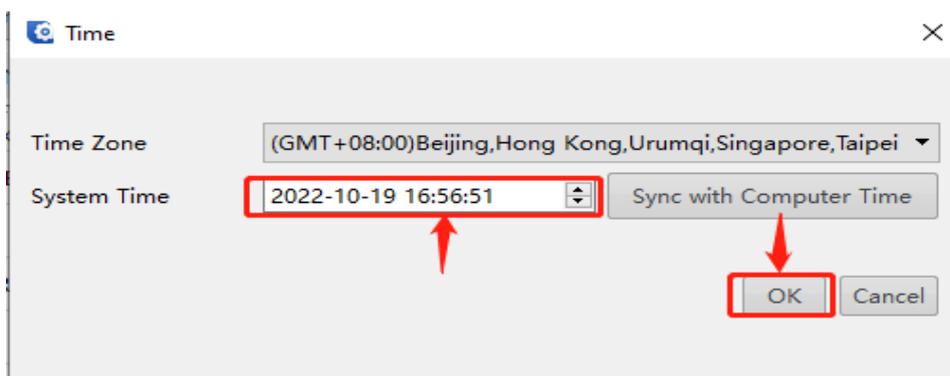


Change from EZView app

Step 1 Go to **Menu>Device Config**, then select your NVR.

Title	How to Change a Uniview NVR's Time Settings?	Version:	V1.2
Product	NVR	Date	11/24/2023

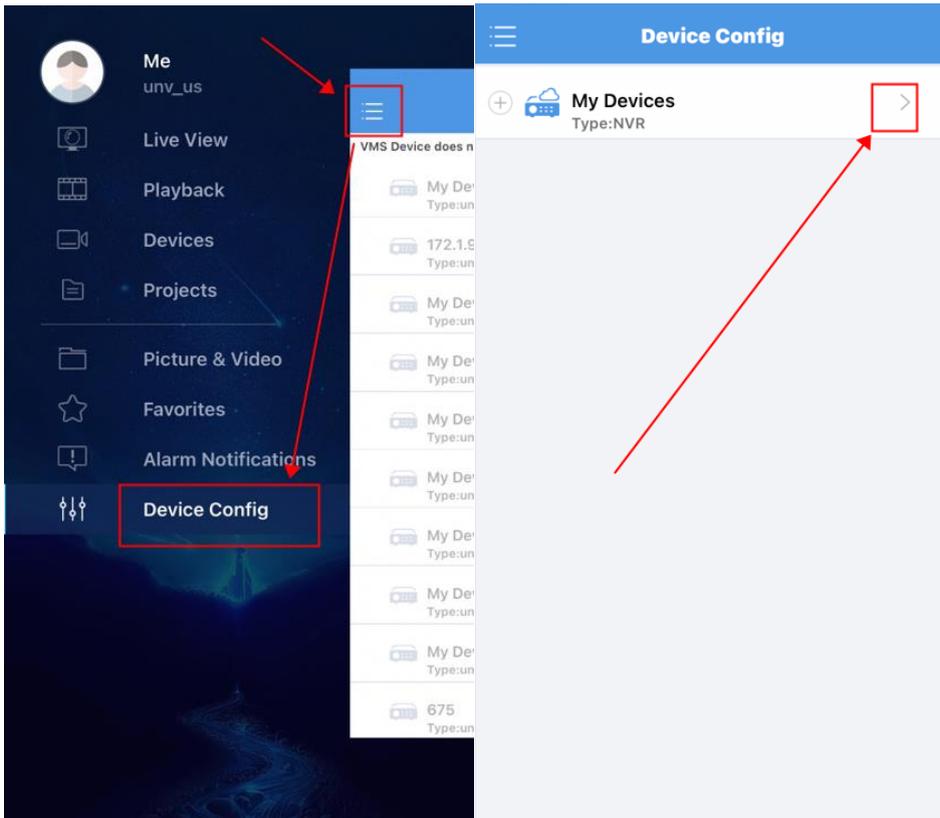


Step 2 Go to **Time** and change the NVR's time or time zone manually or synchronize the NVR's time with mobile phone.

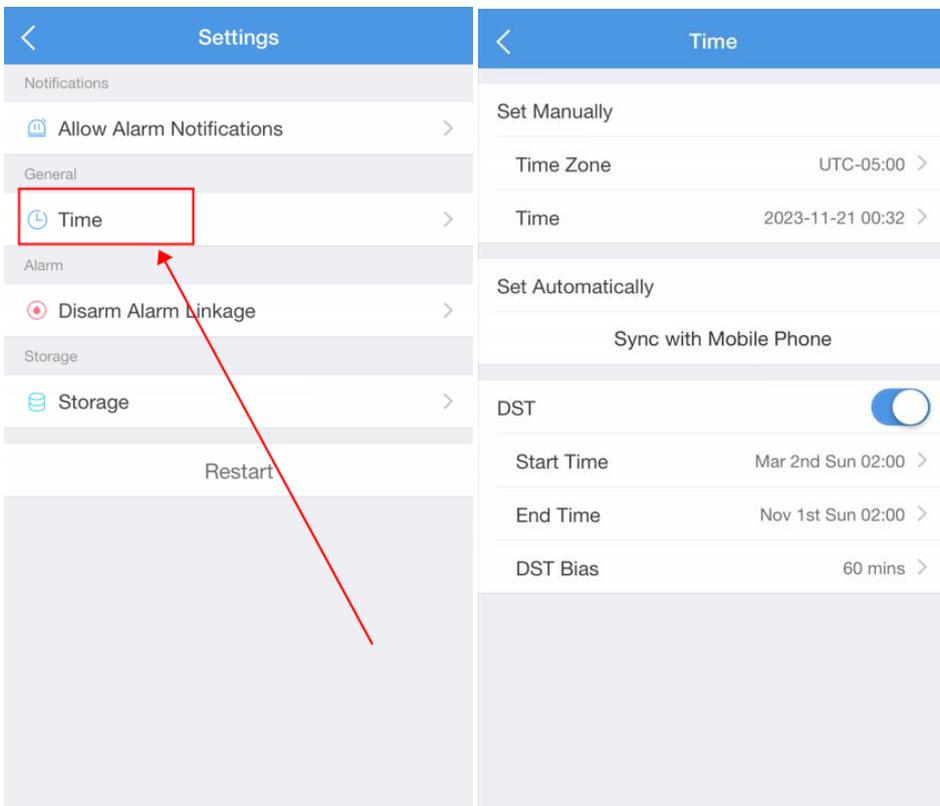


Change from for UNV-Link app

Step 1 Click icon and go to **Set**, then select your NVR.

Title	How to Change a Uniview NVR's Time Settings?	Version:	V1.2
Product	NVR	Date	11/24/2023

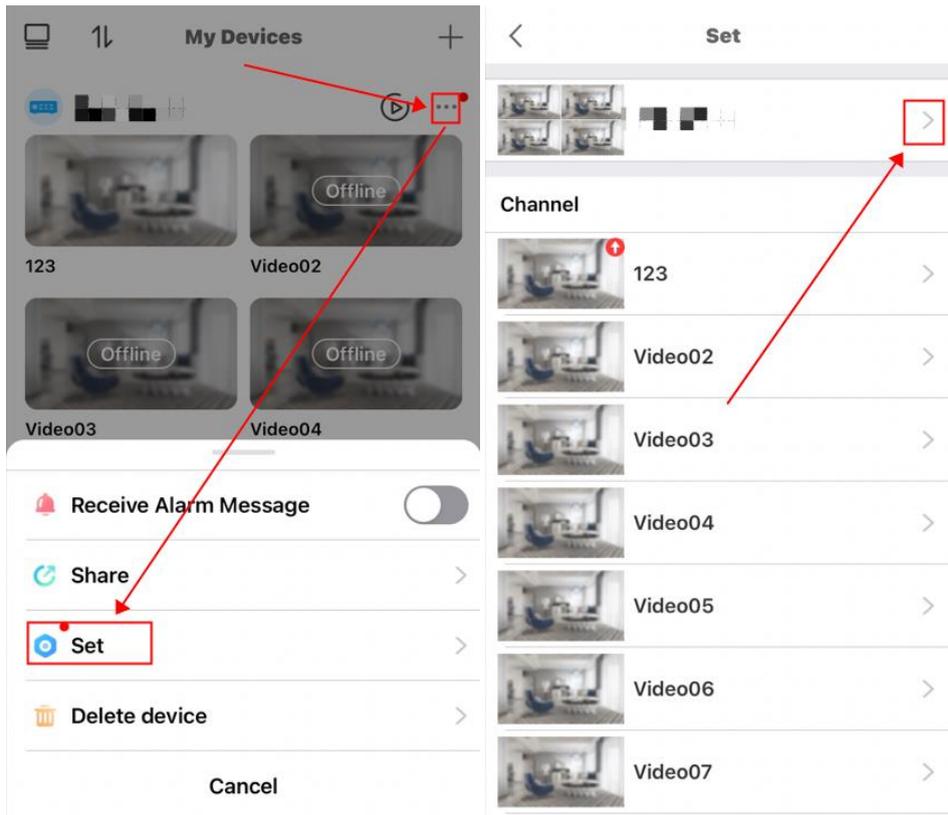

Step 2 Go to **Device Info>Time**.

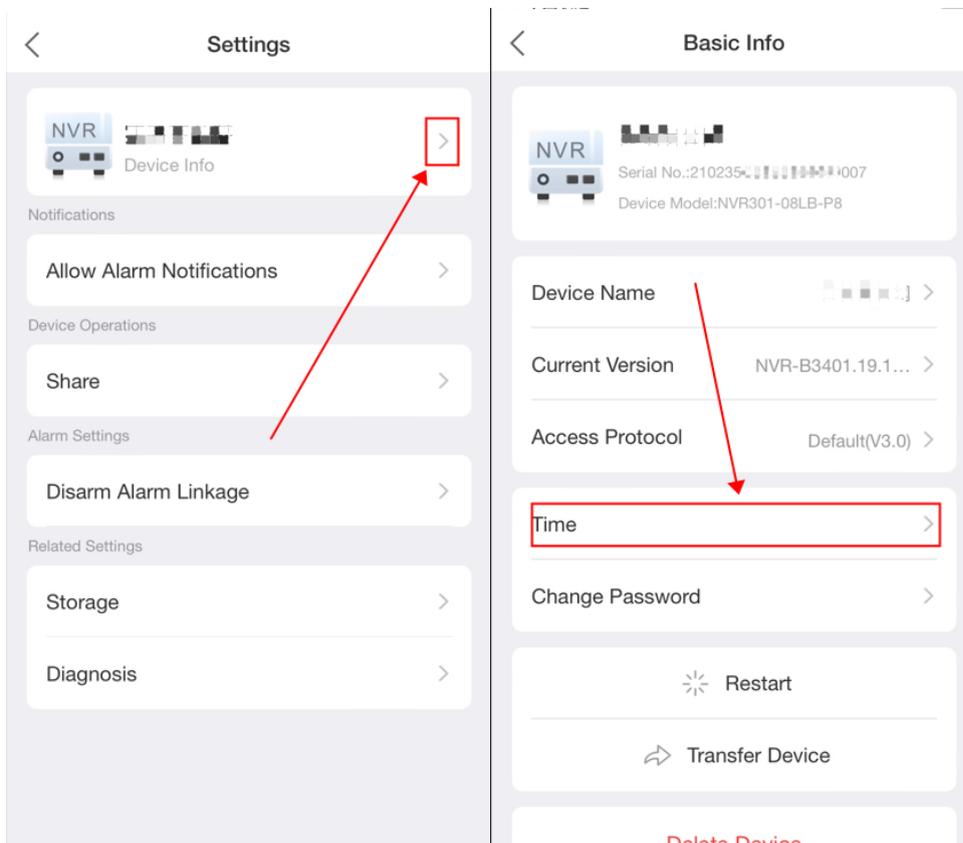

Step 3 Change the NVR's time or time zone manually or synchronize the NVR's time with mobile phone.

Title	How to Change a Uniview NVR's Time Settings?	Version:	V1.2
Product	NVR	Date	11/24/2023

