



How to Change the Access Protocol on UNV-Link?

Title	How to Change the Access Protocol on UNV-Link?	Version:	V1.0
Product	SMB	Date	7/15/2023

How to Change the Access Protocol on UNV-Link?

Description


Note: This method is applicable in most scenarios. If this method does not solve your problem, it is recommended to consult our Tech Support Team.

https://global.uniview.com/Support/Service_Hotline/


Operating Steps

Step 1 Go to the Settings page of the device.

Click **UNV-Link** first and then click the device you want to set up. Click **Set** to go to the Settings page of the device.

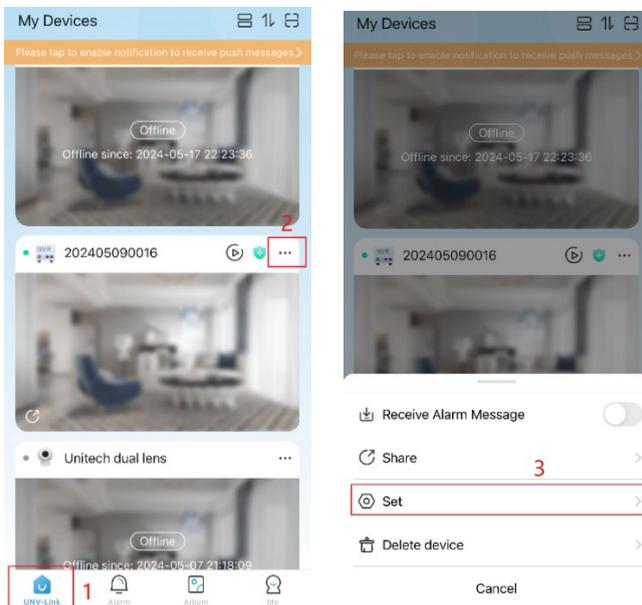


Click on the device.

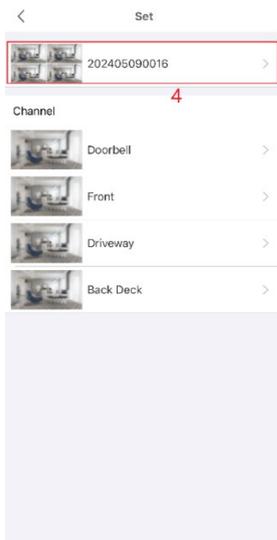

Click on the device again.

Title	How to Change the Access Protocol on UNV-Link?	Version:	V1.0
Product	SMB	Date	7/15/2023

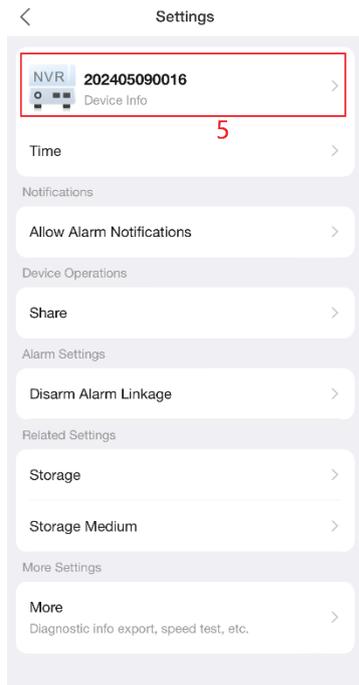

Step 2 Change the Access Protocol.

Click the current protocol name to change it.

