



How to Connect an External Audio Pickup to a Uniview Camera?

Title:	How to Connect an External Audio Pickup to a Uniview Camera?	Version:	V1.1
Product:	IPC	Date	9/26/2023

How to Connect an External Audio Pickup to a Uniview Camera?

Description

Note: This method is applicable to most scenarios. If the method cannot solve your problem, it is recommended to consult our Tech Support Team.

https://global.uniview.com/Support/Service_Hotline/

Operating Steps


Step 1 Log into the camera's web interface.

Step 2 Turn on the audio function on the bottom left of the live view page.



Note: It is recommended to turn up the audio volume to the max for test later.

Step 3 Turn on the **Audio Input** (it is Off by default) under **Setup>Video & Audio>Audio**

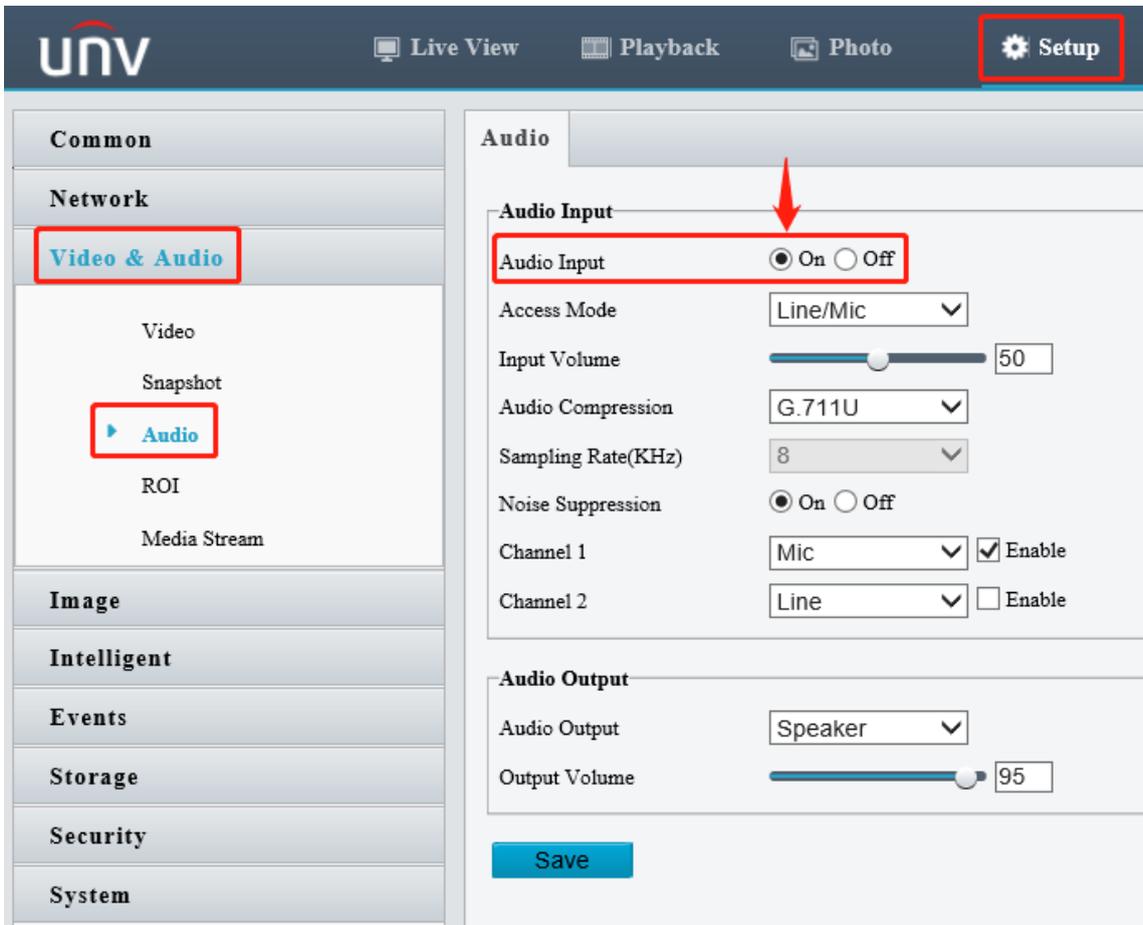

Title:	How to Connect an External Audio Pickup to a Uniview Camera?	Version:	V1.1
Product:	IPC	Date	9/26/2023

Step 4 Connect the external audio pickup to the camera according to the following diagram. The audio should then work automatically.

